


Unirac Flat Flashing INSTALLATION MANUAL

© 2011 by Unirac, Inc. All rights reserved.
Pub 110301-1ii, March 2011

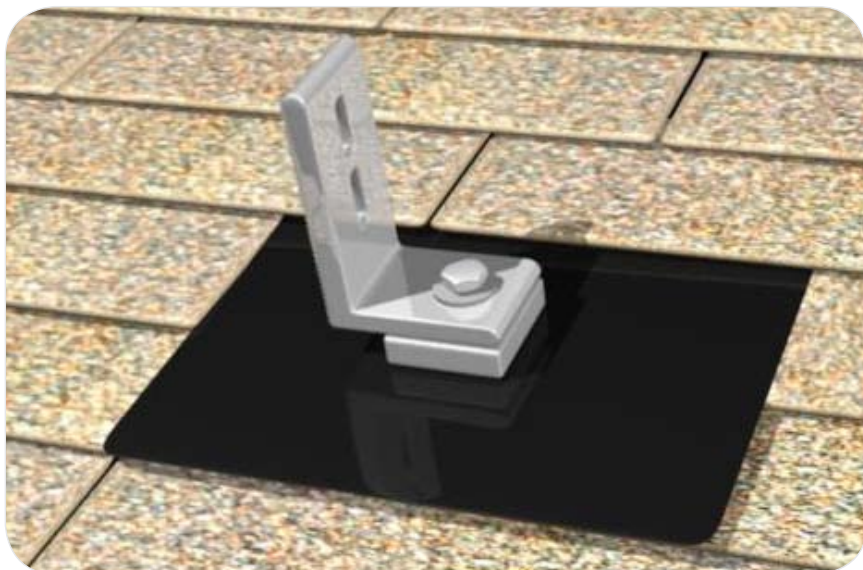

IMPORTANT!

Unirac Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

The information in this document is subject to change without notice.

Unirac shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Unirac.

Unirac Inc.
Marketing Department
1411 Broadway Boulevard, NE
Albuquerque, NM 87102-1545

© Unirac Inc., 2010. All rights reserved.

INTRODUCTION

Unirac Flat Flashing

Thank you for choosing Unirac Flat Flashing. This quick start guide provides easy step-by-step installation instructions. For additional information, please visit us at **www.unirac.com**.



BEFORE YOU BEGIN

- 1 Verify that all of the components are included and consistent with your order.
- 2 *Tools required:* drill, socket drive for lag bolt, tape measure, stud finder, chalk line.


INSTALLING UNIRAC FLAT FLASHING ON COMPOSITION SHINGLE ROOFING

Step 1: Locate the rafters and snap horizontal and vertical lines to mark the installation position for each Flat Flashing.


Step 2: Center the Flat Flashing over the rafter and drill a pilot hole for the lag bolt.

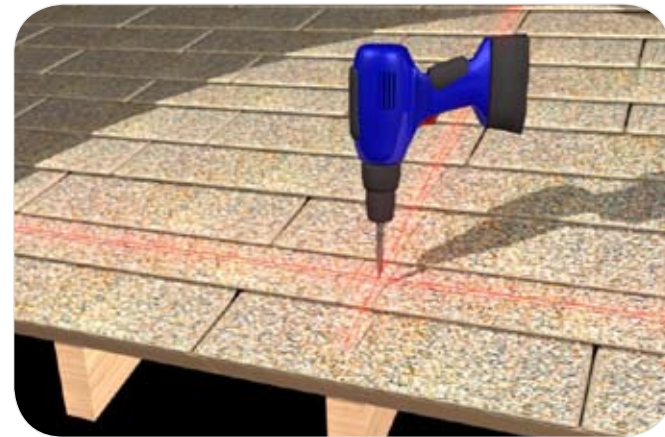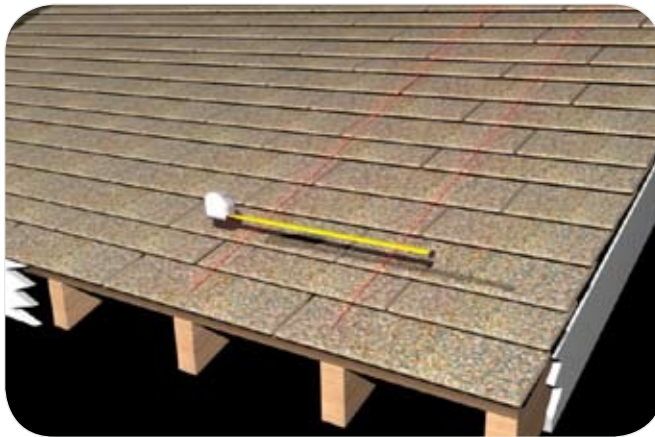



Step 3: Insert the Flat Flashing so the top part is under the next row of shingles and the hole lines up with the pilot hole.

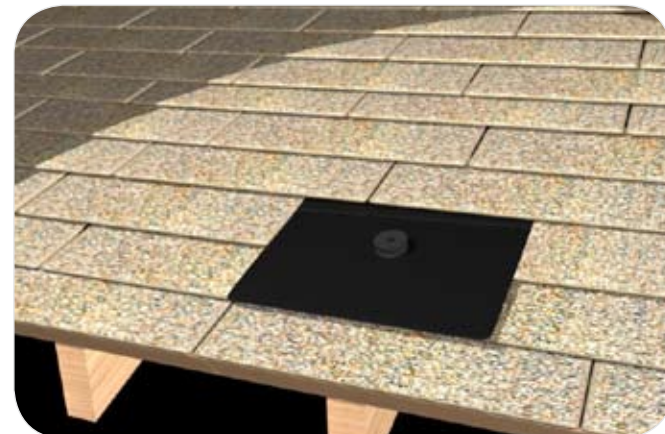

**Step 4: Insert the lag bolt through the components in the order shown in the illustration.
Tighten into the rafter.**

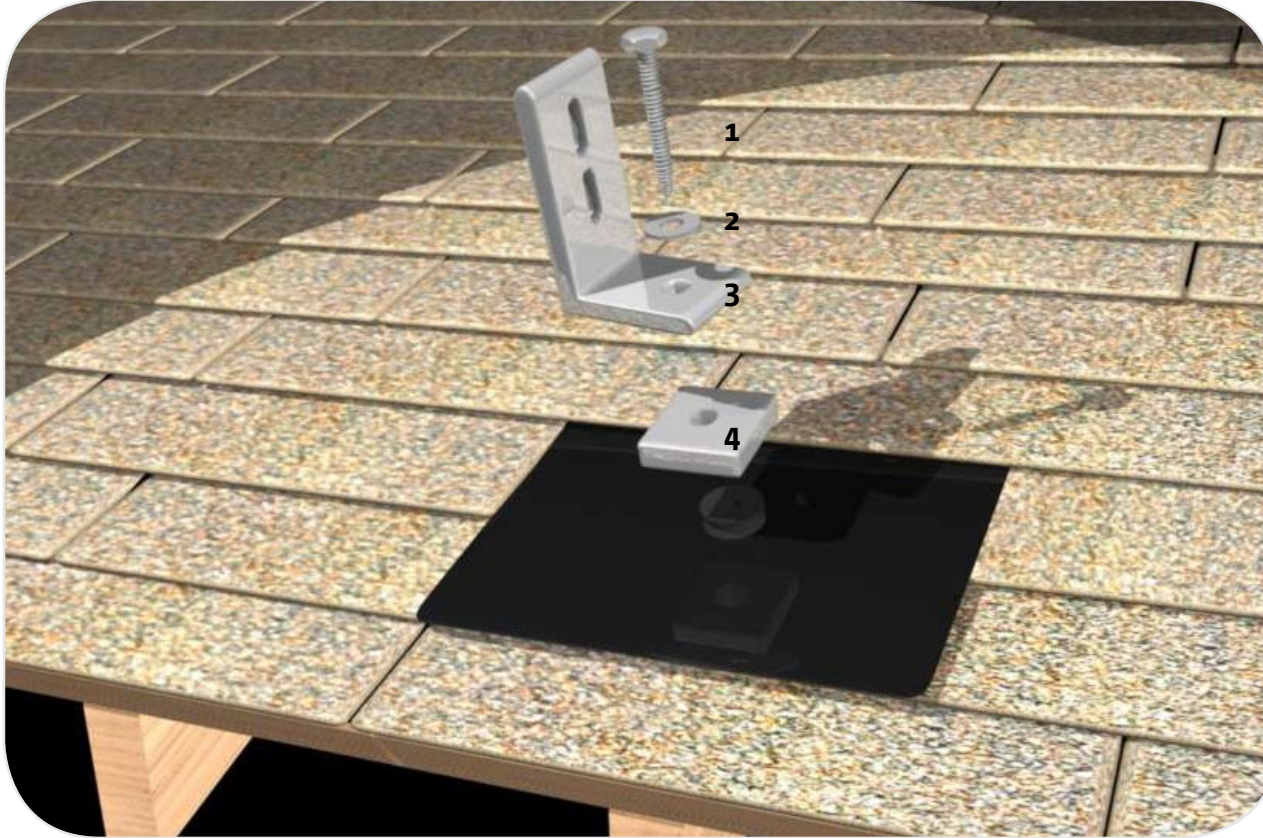

1. Lag Bolt (Installer Provided)
2. Washer (Installer Provided)
3. L-Foot
(or other rail
attachment piece)
4. Square Aluminum Piece
(concave side down)

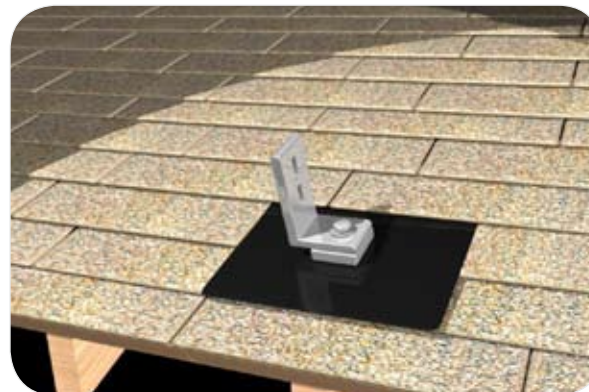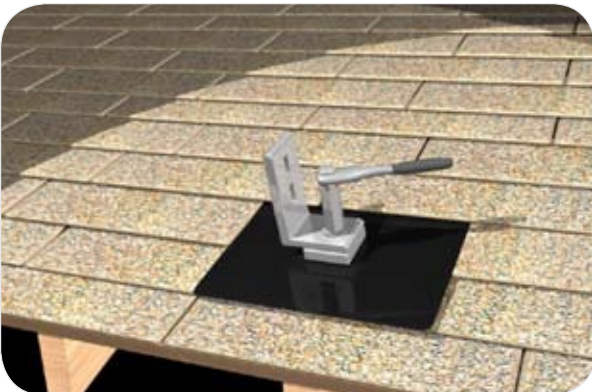

WARRANTY

10 year limited Product Warranty

Unirac, Inc., warrants to the original purchaser ("Purchaser") of product(s) that it manufactures ("Product") at the original installation site that the Product shall be free from defects in material and workmanship for a period of ten (10) years, from the earlier of 1) the date the installation of the Product is completed, or 2) 30 days after the purchase of the Product by the original Purchaser.

The Warranty does not apply to any foreign residue deposited on the finish. All installations in corrosive atmospheric conditions are excluded. This Warranty does not cover damage to the Product that occurs during its shipment, storage, or installation.

This Warranty shall be VOID if installation of the Product is not performed in accordance with Unirac's written installation instructions and design specifications therein, or if the Product has been modified, repaired, or reworked in a manner not previously authorized by Unirac IN WRITING, or if the Product is installed in an environment for which it was not designed. Unirac shall not be liable for consequential, contingent or incidental damages arising out of the use of the Product by Purchaser under any circumstances.

If within the specified Warranty period the Product shall be reasonably proven to be

defective, then Unirac shall repair or replace the defective Product, or any part thereof, in Unirac's sole discretion. Such repair or replacement shall completely satisfy and discharge all of Unirac's liability with respect to this limited Warranty. Under no circumstances shall Unirac be liable for special, indirect or consequential damages arising out of or related to use by Purchaser of the Product.

Manufacturers of related items, such as PV modules and flashings, may provide written warranties of their own. Unirac's limited Warranty covers only its Product, and not any related items.

Unirac Flat Flashing

INSTALLATION MANUAL

www.unirac.com