

# Envoy Communications Gateway



## Contact Information

Enphase Energy Inc.  
1420 N. McDowell Blvd.  
Petaluma, CA 94954

<http://www.enphase.com>

[info@enphaseenergy.com](mailto:info@enphaseenergy.com)

[support@enphaseenergy.com](mailto:support@enphaseenergy.com)

## FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

## Other Information

This Class B digital apparatus complies with Industry Canada ICES-003.

For third-party license information, refer to [www.enphase.com/licenses](http://www.enphase.com/licenses).

For Enphase patent information, refer to <http://enphase.com/company/patents/>.

Product information is subject to change without notice. All trademarks are recognized as the property of their respective owners.

For warranty text, refer to <http://www.enphase.com/warranty>.

User documentation is updated frequently; Check the Enphase website (<http://www.enphase.com/support>) for the latest information.

Copyright © 2014 Enphase Energy Inc. All rights reserved.

# Table of Contents

|                                                                                  |    |
|----------------------------------------------------------------------------------|----|
| Important Information .....                                                      | 5  |
| Read this First.....                                                             | 5  |
| Safety Instructions .....                                                        | 5  |
| Audience .....                                                                   | 5  |
| The Enphase Envoy Communications Gateway .....                                   | 6  |
| Other Elements in the Enphase System.....                                        | 7  |
| How the Envoy Communications Gateway Works .....                                 | 7  |
| Installation Planning and Preparation .....                                      | 8  |
| System Sizing .....                                                              | 8  |
| Preinstallation Checks .....                                                     | 8  |
| Installation Sequence .....                                                      | 9  |
| Install the Envoy .....                                                          | 10 |
| 1. Find the Envoy Serial Number.....                                             | 10 |
| 2. Register the Envoy .....                                                      | 11 |
| 3. Find a Location for the Envoy.....                                            | 12 |
| 4. Connect to the Internet .....                                                 | 12 |
| Method A: Ethernet Cable .....                                                   | 12 |
| Method B: Power Line Communication Bridges .....                                 | 13 |
| Method C: Enphase Wireless Adapter (Wi-Fi).....                                  | 13 |
| 5. Check the Internet Connection .....                                           | 14 |
| 6. Install the Modules and Microinverters .....                                  | 14 |
| 7. Check the Envoy's Progress .....                                              | 15 |
| 8. Wall Mount the Envoy (Optional).....                                          | 16 |
| 9. Build the Virtual Array .....                                                 | 17 |
| 10. View System Performance in Enlighten .....                                   | 17 |
| Envoy Operation .....                                                            | 18 |
| First Scan for Microinverters.....                                               | 18 |
| LCD Screen Display at Initial Start Up.....                                      | 19 |
| Initial Communications Check .....                                               | 19 |
| Subsequent Start Up .....                                                        | 19 |
| Normal Operation .....                                                           | 20 |
| Using the Envoy LCD Menu .....                                                   | 20 |
| Initiating a Scan for New Microinverters .....                                   | 22 |
| Performing a Communications Check .....                                          | 22 |
| Viewing the Grid Configuration .....                                             | 24 |
| Getting a New IP Address .....                                                   | 25 |
| Enabling a Connection to Enphase .....                                           | 26 |
| Disabling a Connection to Enphase .....                                          | 26 |
| Viewing the Envoy Serial Number .....                                            | 27 |
| Selecting a New Locale (Change Language Display) .....                           | 27 |
| How the Envoy Works with Enlighten .....                                         | 28 |
| Using Enlighten to Check Envoy Status .....                                      | 28 |
| Troubleshooting .....                                                            | 29 |
| Power Line Communication Troubleshooting.....                                    | 29 |
| Issue: The Microinverter Count is Lower than the Number of Installed Units ..... | 29 |
| Issue: Envoy Displays Fewer than Three Bars.....                                 | 30 |
| Issue: Envoy Displays Zero Bars.....                                             | 30 |
| Network Basics and Troubleshooting .....                                         | 31 |
| Issue: IP Address Problems .....                                                 | 31 |
| Issue: LCD Screen Displays "-Web" .....                                          | 31 |
| Issue: LCD Screen Displays "Envoy Failure +Web or -Web" .....                    | 32 |

|                                                                                |    |
|--------------------------------------------------------------------------------|----|
| Issue: LCD Screen Displays "Scanning Inhibited".....                           | 32 |
| Issue: The Envoy has Good Signal Strength but is Too Far from the Router ..... | 32 |
| Issue: Wireless Adapter Wi-Fi Problems .....                                   | 32 |
| Issue: How Set Up Wi-Fi Without Wi-Fi WPS.....                                 | 32 |
| Issue: Internet Traffic is Slower After Installing a Bridge .....              | 34 |
| DHCP versus Static IP Addressing .....                                         | 34 |
| MAC Filtering .....                                                            | 35 |
| Firewall Settings.....                                                         | 35 |
| Replacing an Envoy.....                                                        | 36 |
| Envoy Local Interface.....                                                     | 37 |
| Connecting to the Envoy through the Site's LAN .....                           | 37 |
| Directly Connecting to the Envoy without a Broadband Router .....              | 37 |
| Home Screen .....                                                              | 38 |
| Events Screen .....                                                            | 38 |
| Production Screen .....                                                        | 39 |
| Inventory Screen.....                                                          | 39 |
| Administration Screen.....                                                     | 40 |
| Administration Screen Tasks .....                                              | 40 |
| Set or Change the Grid Profile.....                                            | 41 |
| Clear GFI Tripped Condition.....                                               | 48 |
| Clear DC Resistance-Low Condition .....                                        | 49 |
| Set Up Device Scan Control .....                                               | 51 |
| ZigBee Device Configuration .....                                              | 53 |
| Set the Time Zone (optional) .....                                             | 53 |
| Other Administration Tasks .....                                               | 53 |
| Event Messages .....                                                           | 54 |
| Technical Data .....                                                           | 60 |

# Important Information

## Read this First

- Follow the instructions in this manual. These instructions are key to the installation and maintenance of the Enphase Envoy® Communications Gateway (Envoy).
- To ensure the safe installation and operation of the Envoy, note the following safety symbols that appear throughout this document to indicate dangerous conditions and important safety instructions.



**WARNING!** This indicates a situation where failure to follow instructions may be a safety hazard or cause equipment malfunction. Use extreme caution and follow instructions carefully.



**NOTE:** This indicates information that is very important for optimal system operation. Follow instructions closely.

## Safety Instructions

- Perform all electrical installations in accordance with all local electrical codes and the National Electrical Code (NEC), ANSI/NFPA 70.
- Do not attempt to repair the Envoy; it contains no user-serviceable parts. Tampering with or opening the Envoy will void the warranty. If the Envoy fails, contact Enphase Customer Support for assistance ([support@enphaseenergy.com](mailto:support@enphaseenergy.com)).
- Warranty void if cover removed.
- Refer servicing to qualified personnel.
- Before installing or using the Envoy, read all instructions and cautionary markings in the technical description and on the Envoy.

## Audience

This manual is intended for use by professional installation and maintenance personnel.

## The Enphase Envoy Communications Gateway

The Envoy® Communications Gateway is an integral component of the Enphase® Microinverter System™. It operates between the Enphase Microinverters and the Enphase Enlighten® web-based monitoring and analysis software. The Envoy functions as a gateway and monitors the microinverters that are connected to the PV modules. The Envoy collects energy and performance data from the microinverters over on-site AC power lines. It then forwards that data to Enlighten, via the Internet, for statistical reporting.

The three key elements of an Enphase system are the:

- Enphase Microinverter
- Enphase Envoy Communications Gateway
- Enphase Enlighten web-based monitoring and analysis software

This integrated system maximizes energy harvest, increases system reliability, and simplifies design, installation and management. The following diagram shows the Envoy in the system.



### 1 Enphase Microinverters

- are installed beneath each solar module
- maximize energy harvest
- send AC power over AC wiring to the load center
- also send performance data via the AC wiring

### 2 Envoy Communications Gateway

- plugs into an AC outlet
- collects information via the AC wiring
- transmits data through a standard broadband router to the Internet
- collects information and transmits it to Enlighten

### 3 Enphase Enlighten Monitoring

- provides monitoring and analysis
- allows performance data to be viewed from any web browser

## Other Elements in the Enphase System

The Enphase Microinverter converts the DC output of the PV module into grid-compliant AC power. In addition to performing the DC to AC conversion, it maximizes energy production by using a sophisticated Maximum Power Point Tracking (MPPT) algorithm. This integrated system maximizes energy harvest, increases system reliability, and simplifies design, installation and management.


The Enphase Enlighten web-based monitoring and analysis software analyzes the data collected by each communicating microinverter. Enlighten automatically detects any shortfall in energy production, identifies possible causes, and suggests solutions. Enlighten constantly monitors every Enphase Microinverter connected to the Envoy and is essential for monitoring and troubleshooting.

## How the Envoy Communications Gateway Works

Installation and operation of the Envoy require no specialized equipment or unique computer or networking expertise. To the Local Area Network (LAN), the Envoy is just another host on the network, much like a personal computer. The Envoy simply connects to the on-site router for communications with the Enphase Enlighten monitoring and analysis website. The Envoy communicates with the individual microinverters using the existing power lines in the residence or business.

After the Envoy is installed and completes its initial scan, it maintains an internal database of all known Enphase Microinverters at the site it manages. At regular intervals, the Envoy polls each microinverter for its energy data. Using the site's broadband router, the Envoy then forwards that information to Enlighten. The Envoy also reports any error conditions that affect it or the microinverters. You can view both energy data and error conditions in Enlighten.

The Envoy incorporates power line and Internet communications functions. As shown in the diagram, one "side" of the Envoy communicates with the microinverters through power lines at the site. The other "side" of the Envoy communicates with the Internet using a standard Ethernet/network cable plugged into the broadband router.

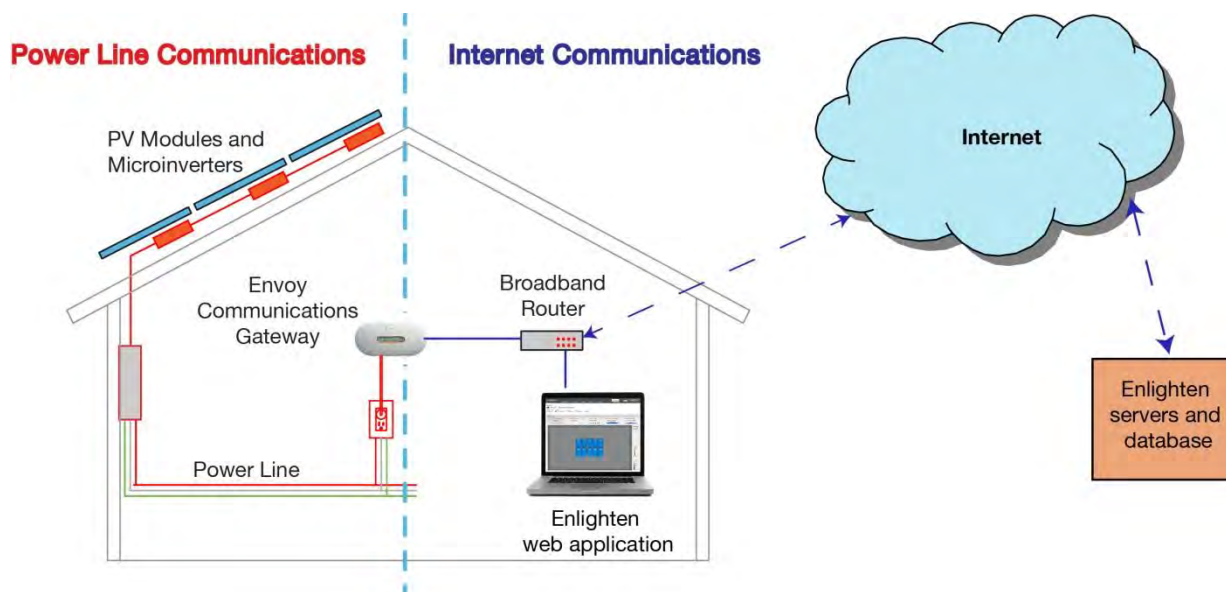

# Installation Planning and Preparation

Review the following preinstallation checks and sizing considerations before you install the Envoy.

## System Sizing

The Envoy is capable of monitoring a large system of Enphase Microinverters. This number varies with Envoy model. Check the model number (SKU) on the Envoy box, or on the back of the Envoy, to determine which model you are installing. Check the following table for capacity information:

| Envoy model number (SKU) | Number of microinverters monitored |
|--------------------------|------------------------------------|
| ENV-120-01               | 600                                |
| IEMU-03                  | 250                                |



**NOTE:** When **multiple** Envoys are required at a single site, see our technical brief on commercial design at <http://www.enphase.com/support>.

## Preinstallation Checks

Before installing the Envoy, make sure that the site has a standard AC outlet available near the load center. Do not use a power strip.

To use the Enlighten web-based monitoring and analysis software, additional requirements are:


- Always-on broadband Internet connection
- Broadband router with spare Ethernet port or a wireless router if using the optional Enphase wireless adapter.
- Up-to-date web browser to view Enlighten. Supported browsers are Internet Explorer 8 or higher, Firefox 11 or higher, Chrome 5 or higher, and Safari 5 or higher. Enlighten requires Adobe Flash Player 10 or higher. For Internet Explorer 8 users, install the Google Chrome Frame plug-in. Enlighten is compatible with Internet-enabled mobile devices running iOS 5 or higher and Android 4 or higher.

Check the Envoy shipping box for the following items:

- Envoy Communications Gateway
- Ethernet cable
- AC power cord
- Power line communication bridges (included with some models)
- *Envoy Communications Gateway Quick Install Guide*

If you plan to wall-mount the Envoy, you need two #8 screws and a screwdriver.

## Installation Sequence

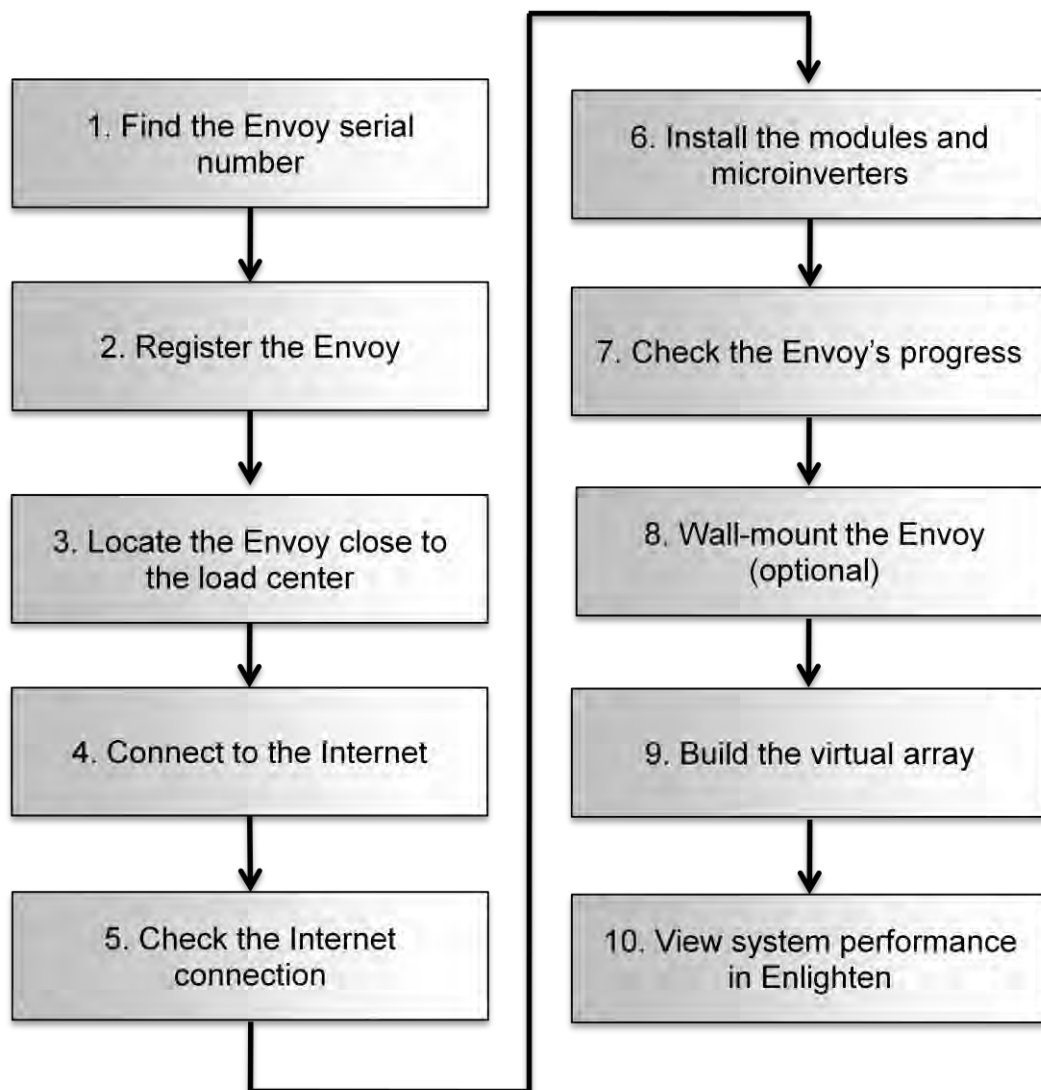

# Install the Envoy

To install the Envoy, perform the following steps.



**BEST PRACTICE:** When powered up and connected for the first time, the Envoy may retrieve an automatic upgrade from Enphase. Because this upgrade may take up to 15 minutes, connect the Envoy first at the site (connect to both AC power and the broadband router) so that it performs the upgrade well before the solar module installation is complete.



**WARNING!** Do not remove power from the Envoy if the LCD displays: “Upgrading. . . Do Not Unplug.”

## 1. Find the Envoy Serial Number


The serial number label is on the back of the Envoy, near the left mounting bracket.

You can build the system map manually, by peeling the serial number label from the Envoy and placing the label on the installation map, or you can use the ArrayGun feature from the Enphase Installer Toolkit to easily build and configure a system. Refer to <http://enphase.com/products/arraygun/> for more information.

To manually build the installation map:

- a. Remove the Envoy's removable serial number label.
- b. Attach the serial number label to the microinverter installation map, or make note of it for registration in the next step.

If needed, you can find an installation map at the back of the Enphase Microinverter manual.

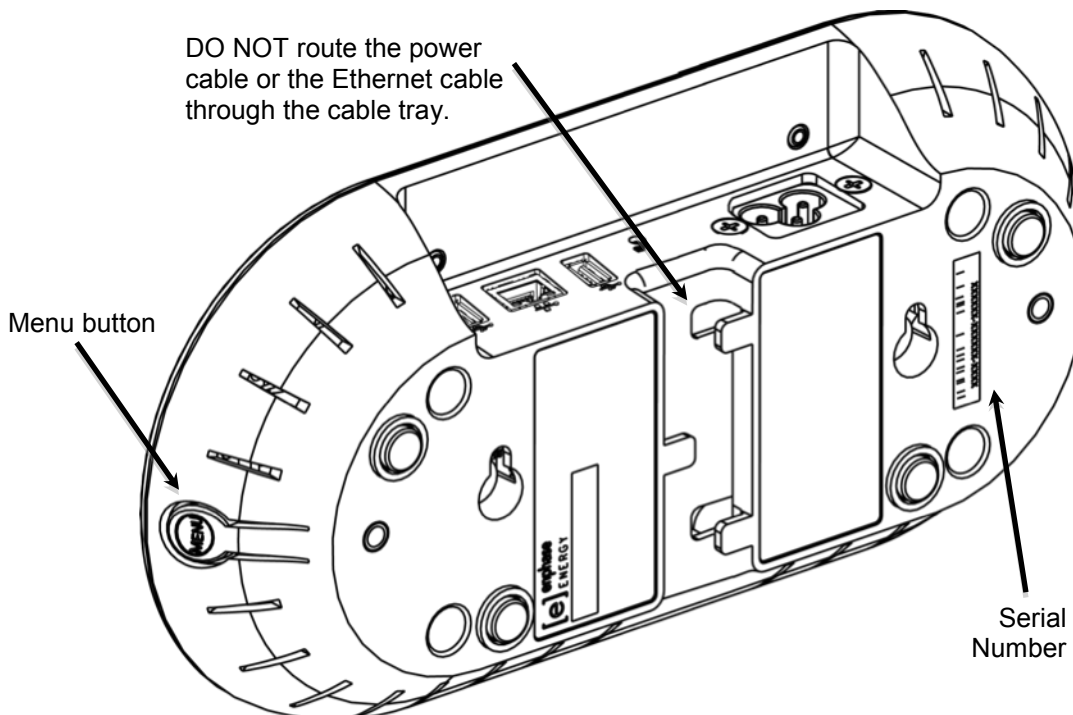

## 2. Register the Envoy

Register the Envoy at the beginning of the PV installation.

- Use your previously issued username and password to log in to in Enlighten.  
If you haven't registered, go to [www.enphase.com](http://www.enphase.com) and click **Enlighten Login**.
- At the installer dashboard, click **Add a New System**.  
If you have already registered the site, find the system under **Installations in Progress**.
- Under **System**, enter the system Name, Type and Installer Reference (optional).
- Enter **Installer** information.
- Under **Owner**, enter the Name, Email, and Phone.
- Under **Location**, enter the Country and address information.
- Under **Envoy**, select the Internet Connection type and enter the Envoy Serial Number.



**NOTE:** If you have selected a country other than the US, or if you select Hawaii as the state under **Location**, the **Grid Profile** menu appears.

- If required, select the appropriate profile from the **Grid Profile** menu. Skip this step in the continental US because the factory settings meet requirements.
- Under **Modules**, enter total number of modules, type, etc.



**NOTE:** For more information on Grid Profiles, see “Set or Change the Grid Profile” on page 41.



**NOTE:** If you need to change the grid profile subsequent to this initial procedure, follow the steps in “Set or Change the Grid Profile” on page 41.

- Click **Save** to submit the form. You will receive a confirmation message: “Activation Created Successfully.”

### System

\*Name

Installer Reference

\*Type

Residential

☐ Third Party Owned (ex: PPA or Leased)

### Installer

Enphase Energy

#### Owner

First Name

Last Name

Email

Phone

Owner will receive MyEnlighten for system performance monitoring.

[Change Enlighten Version](#)

#### Location

Country

United States

Street Address

Street Address 2

City

State/Province

Hawaii

Zip/Postal Code

### Envoy

\*Internet Connection

Select one

Envoy Serial Number

[Add Another Envoy](#)

Grid Profile

Select one

IEEE1547

IEEE 1547 default

IEEE 1547 Mainland alternate

IEEE 1547 Hawaii alternate

IEEE 1547 Hawaii HELCO Utility

IEEE 1547 Hawaii MECO Utility

Hawaii KRUC 20121201

### Modules

\*Total Number of PV Modules (Panels)

PV Module

Select a Manufacturer

### Installation

Microinverter Attachment Type

Select one

Array Type

Select one

Enter array-level details on the system settings page.

### Installation Map

Scan or photograph the system's installation map and upload the file(s) here.

Upload A File:

Browse... No file selected.

Must be PNG, JPG, GIF, OR PDF files under 2MB in size.

Install Map Label:

e.g. Branch Circuit 1, South Roof Face

### Production Estimates

Provide estimated system production data to enable production threshold and compare estimated to actual system performance. You may enter estimated production values for each array individually or for the system as a whole.

☒ Array-level production estimates (enter on the system settings page)
 ☐ System-level production estimates

Program Code

Enphase provides guidance and resources to assist installers in designing a system within appropriate parameters. The installer and qualified electrician are responsible for final design and implementation.

Save

### 3. Find a Location for the Envoy

Place the Envoy as close to the load center as possible. This ensures that the Envoy receives the strongest possible communications signal from each microinverter. Place the Envoy indoors or in an environmentally protected location. For wall mounting instructions, see “**Wall Mounting**” on page 16.

- Locate an indoor AC outlet **close to the site’s load center**.
- Place the Envoy so that its AC cord can reach this outlet.
- Plug the AC power cord into the AC input on the Envoy.
- Plug the other end of the power cord into a dedicated 120VAC outlet (not a power strip).



**WARNING!** When an Envoy is plugged in and powered up for the first time, it is important to allow the database initialization process to complete in its entirety, without unplugging or removing power. This does not apply during subsequent power-downs, even if power is removed during the boot process.

As an alternative if signal strength is poor, power the Envoy from the solar production circuit (where local electrical code allows for monitoring equipment on the same circuit). This provides the best possible power line communications. Remember that you must locate the Envoy indoors (a garage, attic, basement, or other cool, dry location) or in an outdoor weatherproof enclosure. Remember also to allow for Ethernet access.



**WARNING!** Do **not** plug the Envoy into a power strip, surge protector, or uninterruptable power supply (UPS). The surge suppression or filtering within these devices impede power line communication performance. Also, if possible, do not plug a power strip into the same outlet that the Envoy is using. The surge suppression or filtering components of a power strip may still interfere with communications if they are near the Envoy.

### 4. Connect to the Internet

The Envoy requires a connection to the Internet, usually through an existing broadband router or other access point at the installation site. To accomplish this connection, many customers use the included CAT5 Ethernet cable. However, if using this cable is not possible, Enphase offers two other solutions. You can purchase the Envoy with either of the following alternate solutions:

- ENV-120-01. Includes a power line communications (PLC) bridge pair.
- ENV-120-02. Includes a wireless adapter (also known as a “Wi-Fi USB stick”).

Connect to a broadband router using one of these three methods, described in the following sections:

- Ethernet Cable
- Enphase Power Line Communication Bridges
- Enphase Wireless Adapter (Wi-Fi)


When using the Ethernet cable, two small LEDs on the Ethernet port indicate Internet link and activity. One LED will be solid green, and the other will blink green or yellow every few seconds.

#### Method A: Ethernet Cable

- Plug the Ethernet cable into the Ethernet port on the Envoy.
- Plug the other end of the cable into a spare port on the broadband router.



**WARNING!** Do not remove power from the Envoy if the LCD displays: “**Upgrading. . . Do Not Unplug.**”

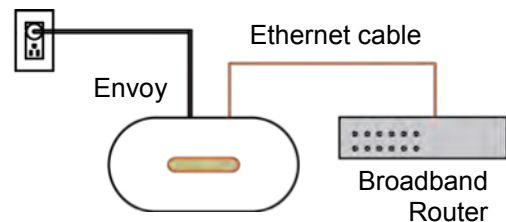

## Method B: Power Line Communication Bridges


(Included with ENV-120-01)

If you need to locate the Envoy away from the router, at a distance where an Ethernet cable is not practical, use power line communication bridges with the Envoy or purchase a wireless Ethernet bridge. Bridges allow the Envoy to communicate with the broadband router without the need for additional Ethernet cabling. To install the power line communication bridges:



**WARNING!** Do not remove power from the Envoy if the LCD displays:  
“Upgrading. . . Do Not Unplug.”

- Plug one of the bridges into the same AC outlet that the Envoy is using.
- Connect one end of the Ethernet cable to the Ethernet port on the Envoy.
- Connect the other end of that Ethernet cable to the bridge.
- Plug the other bridge to an AC outlet near the broadband router.
- Connect one end of a second Ethernet cable to the second bridge.
- Connect the other end of the Ethernet cable into the broadband router.
- If the broadband router is operational, press and hold the Envoy menu button. Release the button when the LCD displays **Get New IP Address**. Wait for 5 minutes. If this fails, unplug the Envoy, wait for 15 seconds, and plug it back in. Wait 5 minutes for connection.

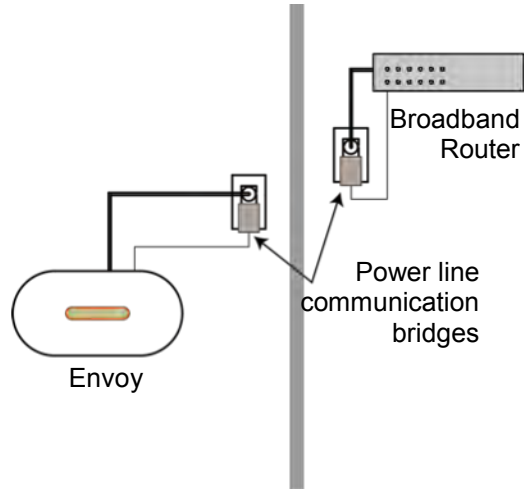

## Method C: Enphase Wireless Adapter (Wi-Fi)


(Included with ENV-120-02)

To use the Enphase wireless adapter, you need a wireless router. To install the wireless adapter, do the following:



**NOTE:** If using a wireless adapter, you must use the Enphase-provided wireless adapter, and the router or access point must support wireless connections (Wi-Fi). Other wireless adapters may not operate correctly and are not supported by Enphase.

- On the Envoy, verify that no Ethernet cable is plugged into the Envoy RJ45 port.
- Verify that the wireless router you are connecting to supports Wi-Fi WPS. On the router, look for a button labeled “WPS”. If the router does not support Wi-Fi WPS, see the next section.
- Verify that the start-up message on the LCD screen reads “R3.8” or later.
  - If it does not, upgrade the Envoy by connecting the Envoy Ethernet port to the broadband router with the Ethernet cable that came with the Envoy.

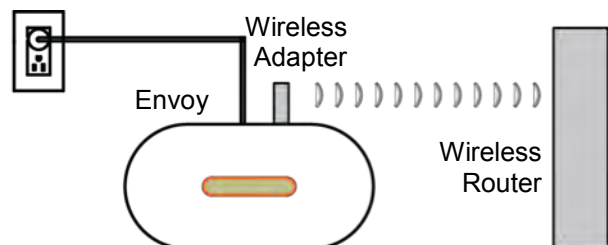

**WARNING!** Do not remove power from the Envoy if the LCD displays:  
“Upgrading. . . Do Not Unplug.”

- After the upgrade completes, **unplug the Ethernet cable from the Envoy.**

- d. Once you have verified that the Envoy is running release R3.8 (or later), plug the wireless adapter into the left USB port (looking at Envoy from the front), and wait for 10 seconds.
- e. Press and hold the WPS button on the wireless router (or access point) for two seconds. On many routers, the WPS button flashes at this point.
- f. Within two minutes, return to the Envoy. Press and hold the Envoy menu button until the Envoy Menu appears. Release the Envoy menu button when **Enable Wi-Fi WPS** appears on the LCD screen.
- g. Within two minutes an updated IP address appears on the Envoy LCD screen. This IP address begins with a “W” to indicate that a wireless connection is established.
- h. If the updated IP address does not appear, retry the previous steps as the connection window may have timed out.
- i. Within a minute, the Envoy LCD screen displays **+Web**, indicating a successful connection to Enphase.



**NOTE:** The operating temperature range for the Enphase-provided wireless adapter is 0°C to 40°C (32°F to 104°F).



**NOTE:** If the wireless router does not support WPS or you aren't using WPS for Wi-Fi setup, see “Network Basics and Troubleshooting” on page 31.

## 5. Check the Internet Connection

- a. Look for the “+Web” indication.
- b. If it still shows “-Web” five minutes after connecting to the broadband router, see “Network Basics and Troubleshooting” on page 31.



**NOTE:** Power production shows as 0W and 0kWh until the microinverters are discovered, the Envoy has reported to Enlighten, and monitoring begins. Power production also shows 0W and 0kWh for about a minute whenever the Envoy powers up.

|               |      |
|---------------|------|
| 192.168.2.140 | +Web |
| 0W            | 0kWh |

## 6. Install the Modules and Microinverters


- a. Install the PV modules and the microinverters as directed by the installation manuals.
- b. Use the ArrayGun to scan the microinverters. For more information, go to <http://enphase.com>.
- c. As an alternative, you can manually build the map: peel the removable serial number label from each microinverter and affix it to the respective location on the map

## 7. Check the Envoy's Progress

- a. Check the device count (shown as “2” in the illustration). An automatic device scan will to detect microinverters when the DC and AC connections are completed and the AC circuit is energized. If the device scan isn't running, start a new one:

- Press and hold the Envoy menu button (on the right side of the Envoy).
- Release the button when the LCD window displays **Enable Device Scan**.

- b. Check the power line communications. The number of “Level” bars on the Envoy LCD Level/Devices screen should be three or more. (The illustration shows three bars.) If there are fewer than three bars, see “Power Line Communication Troubleshooting” on page 29. If the communication check isn't running, start a new one:

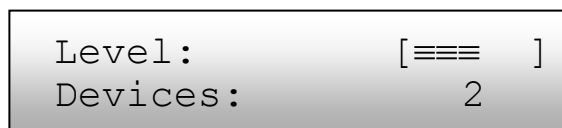

- Press and hold the Envoy menu button (on the right side of the Envoy).
- Release the button when the LCD window displays **Enable Communication Check**.



**NOTE:** The Envoy may display “Priority Scan is Active” on the LCD screen during the device scan.

- c. Check that the Envoy LCD shows a complete device count after about 20 minutes. If it does not, see “Power Line Communication Troubleshooting” on page 29.
- d. Check that all microinverters are discovered. As soon as all microinverters at the site have been discovered, use the Envoy Device Scan Control menu to stop the device scan:
  - Press and hold the Envoy menu button (on the right side of the Envoy).
  - Release the button when the LCD window displays **Disable Device Scan**.



**NOTE:** The number of devices shown in the Device Scan screen may not match the number of devices shown on the Home screen until the device scan is complete.




**NOTE:** For sites with neighboring Enphase systems, do not allow a device scan to run overnight because it may discover neighboring microinverters when they first power-up in the morning. Always stop the device scan in the afternoon, before leaving the site.

- e. Refer to “LCD Screen Display” on page 19 for more information.

## 8. Wall Mount the Envoy (Optional)



**NOTE:** Before mounting the Envoy, it is best to perform a Communications check, as described on page 22, to find the best location for your Envoy.

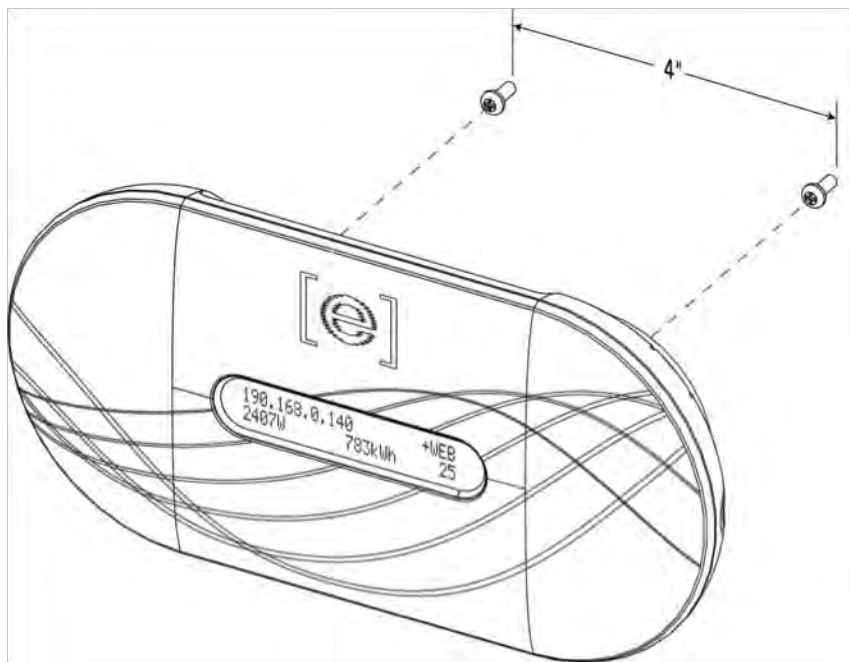

After you have positioned your Envoy for optimal communications and after it has detected all devices, you can mount the Envoy on a wall. To do this:

- a. Use two drywall screws or wall anchors (not included) to affix the Envoy to the wall, mounted at the dimensions shown. You will need two #8 screws (4.17 mm or 0.16 in. diameter); maximum screw head diameter is 8.9mm (0.35 in.).
- b. Slide the Envoy onto the mounting screws, aligning the Envoy screw holes with the screws installed in step a.



**NOTE:** DO NOT route the power cable or the Ethernet cable through the cable tray on the rear of the Envoy.

## 9. Build the Virtual Array

When the system is energized and the Envoy detects at least one microinverter, create the virtual array in Enlighten from the installation map you created.

You can scan and upload the paper copy of the Installation Map, or you can use the ArrayGun feature from the Enphase Installer Toolkit to easily build and configure a system. Refer to <http://enphase.com/products/arraygun/> for more information.

To build the virtual array manually:

- Log in to Enlighten.
- Use Array Builder to create the virtual array in Enlighten.
- Use your installation map as your reference.

To see the Array Builder demo, go to

<http://enphase.com/support/videos>.

Once the virtual array is built, Enlighten displays a graphic representation of the PV system. It also shows detailed current and historical performance information.

**Add Array**

**1 Choose orientation of modules within array**  
☒ ☐ 1 You can mix the orientation of modules and rotate them in a moment.

**2 Rough shape**  rows x  columns = 9 modules  
  
1 Once the array is created you can add, subtract and move modules easily to create an accurate plan.

**3 Azimuth**  ° 1 Azimuth is the difference, measured in 0-359 degrees, from true North.


**4 Array name**

**Create Array**

## 10. View System Performance in Enlighten

Once the array is built and the system is activated, you can log in to Enlighten to view site data.

- If you have not done so already, log in to Enlighten to view system data.
- Refer to “How the Envoy Works with Enlighten” on page 28 for more information.

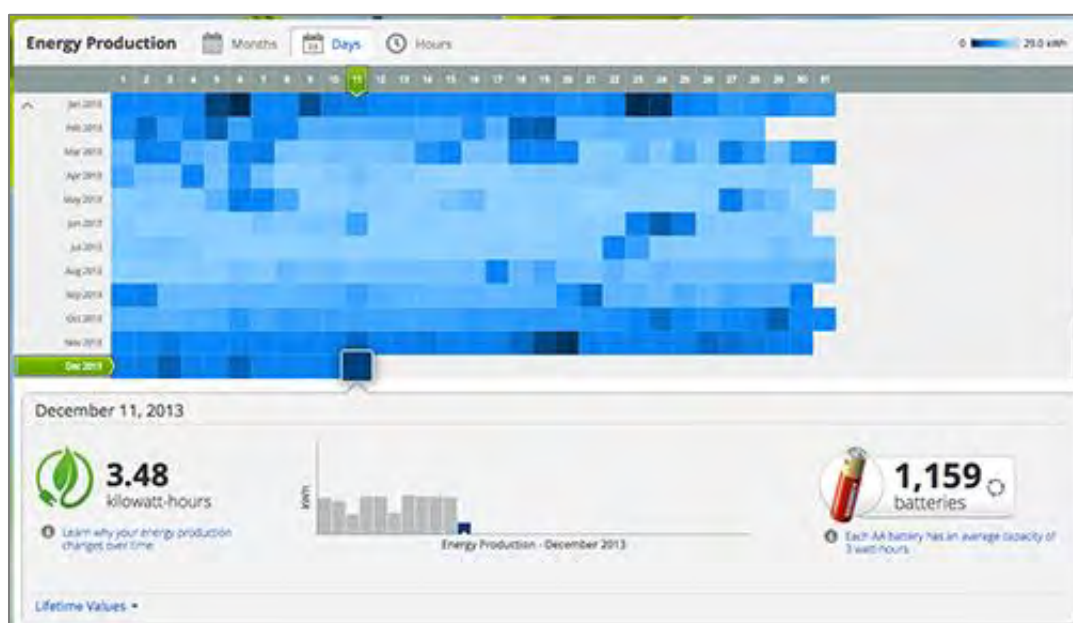

# Envoy Operation

## First Scan for Microinverters

A newly installed Envoy automatically performs an initial scan to discover all of the microinverters that are installed and powered up at the site. This initial scan continues to search for new microinverters for eight hours from initial start up of the Envoy. This one-time scan is not repeated automatically. During the scan, you will notice some values increasing on the Envoy display.



**NOTE:** If the eight-hour scan expires before installation of microinverters is complete, you must initiate a new scan. To start a new device scan, see page 22 of this manual.



**NOTE:** If the Envoy was not factory built with software release 3.2, the initial scan will run for seven days. With release 3.2, the initial scan time was reduced from seven days to eight hours. If the Envoy upgrades to release 3.2 after an initial scan has begun, the initial scan duration remains at seven days.



**WARNING:** Stop the scan once all of the devices are detected (see page 15). For sites with neighboring Enphase systems, do not allow the device scan to run overnight because it may discover neighboring microinverters when they first power-up in the morning.

The Envoy identifies each device by its unique serial number. If a microinverter is added or replaced at the site, you must initiate a new scan so that the Envoy can discover the new microinverter. To start a new device scan, see page 22 of this manual.



After the Envoy has detected at least one new device, it automatically enters Priority Scan mode. The LCD screen displays the following, where “nnnn” represents the number of microinverters (devices) detected.

```
Priority Scan is  
Active.   Devs: nnnn
```

When the Envoy does not detect a new device during a polling interval (usually five minutes), it exits Priority Scan mode. If, subsequently, the Envoy detects another new device, it returns to Priority Scan mode. It remains in this mode until it again completes an interval where no new devices are detected.


## LCD Screen Display at Initial Start Up

When the Envoy starts up for the first time, it goes through the initial boot sequence. During this initial boot sequence, the Envoy LCD screen displays start-up progress as shown:

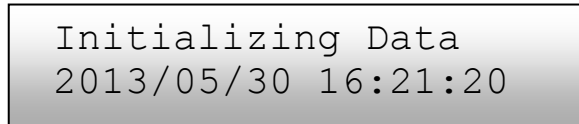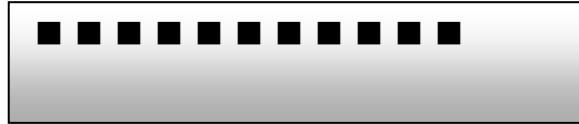

### Initial Communications Check

The last two screens in the initial sequence alternate until the Communications Check ends, after 20 minutes. The Envoy normally displays "-Web" for two to three minutes after the first start up. It then sends the first report to Enlighten. When Enlighten responds, the Envoy displays "+Web".

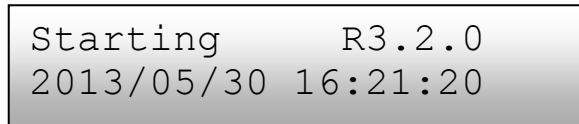

### Subsequent Start Up

After a power outage or Envoy shut down, the Envoy is ready to work just five minutes after reapplying power. You will know the Envoy has completed booting and has started normal operation when it displays both an IP address and the "+Web" status indication in the LCD screen. The normal, post-installation boot sequence is similar to the initial start up, although the "Initializing Data" screen is not repeated.



## Normal Operation

Once the Envoy completes a scan, normal operation begins or resumes. At this point, the indicators in the LCD screen show current values for your system. This is the home screen:

|               |           |
|---------------|-----------|
| 192.168.2.140 | +Web      |
| 2407W         | 783kWh 25 |

It may be a few minutes before energy data appears or increases on the home screen after starting up the Envoy or initiating a scan. Information shown during normal operation includes:


- Local IP address, for example: **192.168.2.140** (your actual local IP address will be different). The Envoy attempts to get a dynamically assigned DHCP (Dynamic Host Configuration Protocol) IP address during power-up sequence. The Envoy uses the DHCP IP address as a route to the Internet. If 169.254.120.1 is shown, the Envoy has not yet acquired a dynamic IP. Refer to “Troubleshooting” on page 29, if this address continues to display.
- Web connection indication: **+Web**. The web status indicates whether the Envoy is connected to Enlighten. The status **-Web** indicates that the Envoy is not connected to Enlighten.
- Indication of the present power-production, in watts: **(n)W** (where n is a number)
- Indication of the life time kilowatt hours reported to this Envoy: **(n)kWh** (where n is a number)
- Indication of the number of online microinverters producing power, reporting in to the Envoy, and not having any error conditions: **(n)** (where n is a number). At night, the number of microinverters displayed is zero.

After the Envoy establishes an IP address and the web connection, the Envoy periodically contacts an NTP (Network Time Protocol) server to maintain an accurate local time.



## Using the Envoy LCD Menu

Use the Envoy Menu button located on the right side of the Envoy to access the Envoy LCD menu.

1. Press and hold this button. After two seconds the Envoy menu appears in the Envoy's LCD screen.
2. Continue holding the Menu button. Menu items appear in the following order:

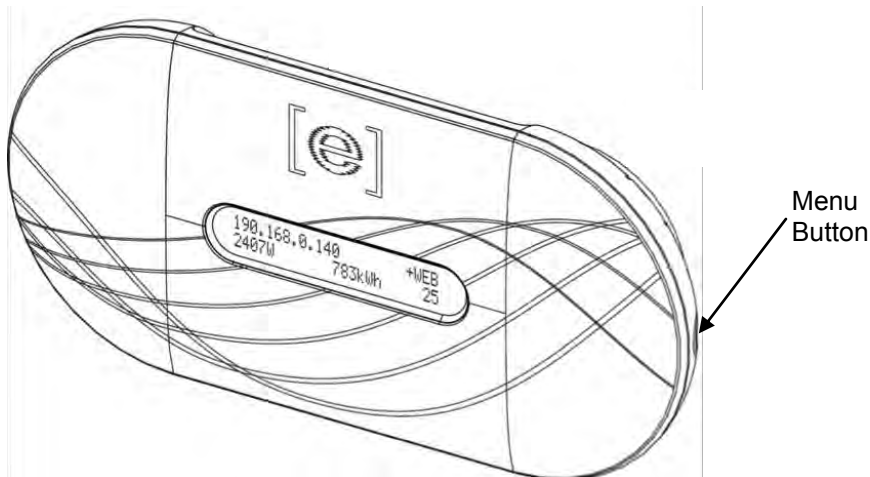

3. To select a menu item, release the Menu button when the desired menu item appears. The menu continues to cycle as long as you are pressing the Menu button. The **Exit Menu** option returns to the normal (default) display, usually the Home screen. See the following sections for detailed procedures.

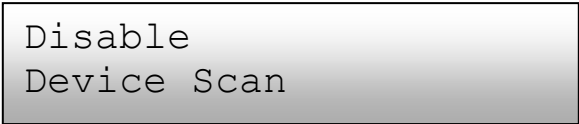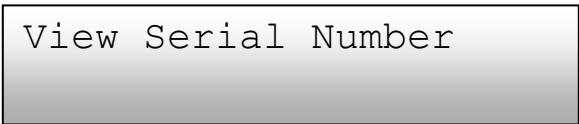
A rectangular button with a light gray gradient background and a thin black border. The text "Exit Menu" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Enable Device Scan" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Disable Device Scan" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Enable Communication Check" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Disable Communication Check" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "View Grid Configuration" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Get New IP Address" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Enable Connection To Enphase" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Disable Connection To Enphase" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "View Serial Number" is centered in a monospaced font.A rectangular button with a light gray gradient background and a thin black border. The text "Select New Locale" is centered in a monospaced font.

## Initiating a Scan for New Microinverters

If you add additional microinverters to an existing system or replace a microinverter, you must run a scan to detect the new devices. To initiate a scan after you add new microinverters to an existing Enphase system, perform the following steps.


Alternatively, you can initiate a scan through the Administration page when connected to the Envoy local interface with a computer or via Enlighten (refer to “Using Enlighten to Check Envoy Status” on page 28).

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays “Enable Device Scan”, release the Menu button.

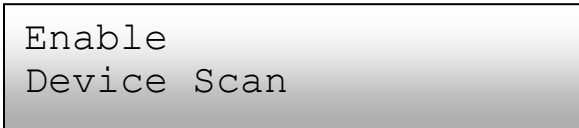

Enable  
Device Scan


The LCD screen then reads:

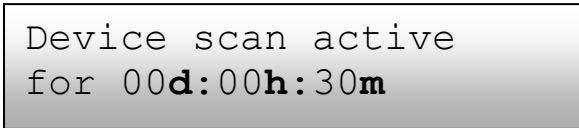

Device scan active  
for 00**d**:00**h**:30**m**

The Envoy begins a 30-minute scan (if a longer scan is not already in progress) to identify all of the microinverters deployed at the site.

3. Log into Enlighten to check for the new microinverter, and use Array Builder to add the new microinverter to the virtual array.
4. After the microinverter is detected, it is best to disable the scan. To do this, press and hold the Envoy Menu button for two seconds to view the Envoy menu. When the LCD screen displays: “Disable Device Scan”, release the Menu button.

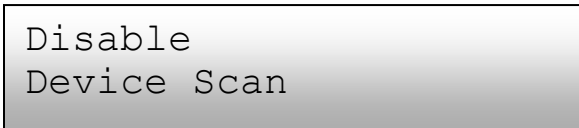

Disable  
Device Scan

## Performing a Communications Check

If you are unsure of where to place the Envoy for maximum performance, you can install the Envoy in various locations and check signal strength at each location. Normally, a communications check starts automatically after an Envoy restart. Alternatively, you can initiate a communications check with the Envoy Menu button or through the Administration page when connected to the Envoy local interface with a computer. You can also use Enlighten (see “Using Enlighten to Check Envoy Status” on page 28).



**NOTE:** Device scans and communications checks can only be done during daylight hours when the microinverters are active (that is, powered by the PV modules).

To use the Envoy Menu button to initiate a communications check:

1. Press and hold the Menu button on the right side of the Envoy to bring up the Envoy menu on the LCD screen.
2. When the LCD screen displays “Enable Communication Check”, release the Menu button.

Enable  
Communication Check

The LCD screen then reads:

Comm check enabled  
for 20min

The Envoy begins a 20-minute communications check to assess the signal strength between the Envoy and the microinverters detected at the site. Until the Envoy begins detecting microinverters, the display reads:

Communications check  
Searching Devices



**NOTE:** The communications check displays communication levels for devices already in the Envoy database; it does not scan for new devices.

When the Envoy begins detecting microinverters, the display shows power line communication Level and Device count:

Level: [≡≡≡]  
Devices: 2

To the right of the word “Level”, you’ll see brackets enclosing zero to five bars. The example above shows three bars.



**NOTE:** Until microinverters are detected, the Level indicator shows no bars.

Signal strength is acceptable if three to five bars are displayed and all devices are accounted for. One to two bars may not be sufficient for consistent communication.

3. If, after 15 minutes, fewer than three bars are displayed, refer to “Power Line Communication Troubleshooting” on page 29.

The “Devices” counter displays the number of microinverters detected and will increase until all microinverters are detected. Ultimately, the number of microinverters detected should match the number of installed microinverters.

4. After 20 minutes, the communications check stops. To stop the communications check before it times out, press and hold the menu button to activate the Envoy menu. When “Disable Communication Check” is displayed, release the menu button.

## Viewing the Grid Configuration

To view the grid configuration (trip points profile) for the site, do the following.



**NOTE:** You cannot change the grid profile using this menu. To change this profile, and for more information on grid profiles, see “Set or Change the Grid Profile” on page 41.

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays **View Grid Configuration**, release the Menu button.

View Grid  
Configuration

The LCD screen then reads:

Gathering Grid  
Configuration Data

If a grid profile **has not** been applied, the following screen is displayed. This indicates that the microinverters are using the factory-installed (default) grid profile.

Using factory-inst'd  
grid profile

3. If needed, select a profile as described in “Set or Change the Grid Profile” on page 41.

If a grid profile **has** been applied, the following screens may be displayed.

4. Press the menu button at any time to exit this process.

(n) total devices

Number of microinverters detected.

(n)unsettable devices

Number of microinverters that **cannot** be set with a grid profile.

(n)devices are set  
with (local spec)

Number of microinverters that are set with a grid profile and the name of the specification being used.

|                                         |                                                                                                             |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------|
| (n)are propagating<br>with (local spec) | Number of microinverters that are in the process of being set and the name of the specification being used. |
| (n)devices<br>have failed               | Number of devices that failed to be set with a grid profile.                                                |
| Checking grid config<br>Select to exit  | Updating grid configuration data.                                                                           |

## Getting a New IP Address

The Get New IP Address menu item makes the Envoy request a new IP address from the broadband router. To get a new IP address:

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays “Get New IP Address”, release the Menu button.

Get New IP Address

The LCD screen now reads:

Getting IP Address

Once the new IP address has been requested, the LCD will return to the default display.

## Enabling a Connection to Enphase

The Enable Connection to Enphase menu item creates a secure connection to Enphase allowing Enphase personnel to troubleshoot the system remotely.

To open a connection to Enphase:

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays “Enable Connection to Enphase”, release the Menu button.

A rectangular LCD screen with a light gray background and a thin black border. The text "Enable Connection To Enphase" is displayed in a monospaced font, centered on the screen.

Enable Connection  
To Enphase

The LCD screen now reads:

A rectangular LCD screen with a light gray background and a thin black border. The text "Enabling Connection" is displayed in a monospaced font, centered on the screen.

Enabling Connection

Once the connection is open, the LCD will return to the default display.

## Disabling a Connection to Enphase

The Disable Connection to Enphase menu item closes the secure connection to Enphase.

To close a connection to Enphase:

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays “Disable Connection to Enphase”, release the Menu button.

A rectangular LCD screen with a light gray background and a thin black border. The text "Disable Connection To Enphase" is displayed in a monospaced font, centered on the screen.

Disable Connection  
To Enphase

The LCD screen now reads:

A rectangular LCD screen with a light gray background and a thin black border. The text "Disabling Connection" is displayed in a monospaced font, centered on the screen.

Disabling Connection


Once the connection is closed, the LCD will return to the default display.

## Viewing the Envoy Serial Number

The View Serial Number menu item displays the serial number of the Envoy.


To view the serial number:

1. Press and hold the Envoy Menu button. After two seconds the Envoy menu appears.
2. Continue holding the Menu button. When the LCD screen displays “View Serial Number”, release the Menu button.

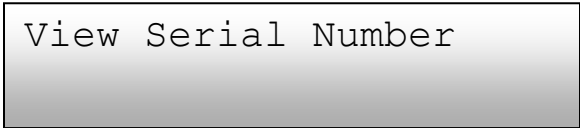

View Serial Number

The LCD screen now reads:

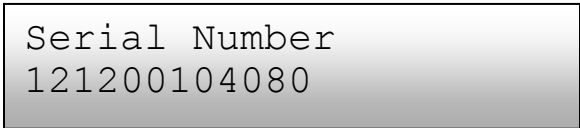

Serial Number  
121200104080

Once the serial number has been displayed, the LCD will return to the default display.

## Selecting a New Locale (Change Language Display)


You can set the LCD to display in English, French, German, Italian or Spanish. To do this:

1. Press and hold the Envoy Menu button. After two seconds you will enter the Envoy menu.
2. Continue holding the Menu button. When the LCD screen displays “Select New Locale”, release the Menu button.



Select New Locale

3. The Envoy LCD panel will scroll through the available locale settings. When you see the setting you need, press the Menu button and hold for two seconds.

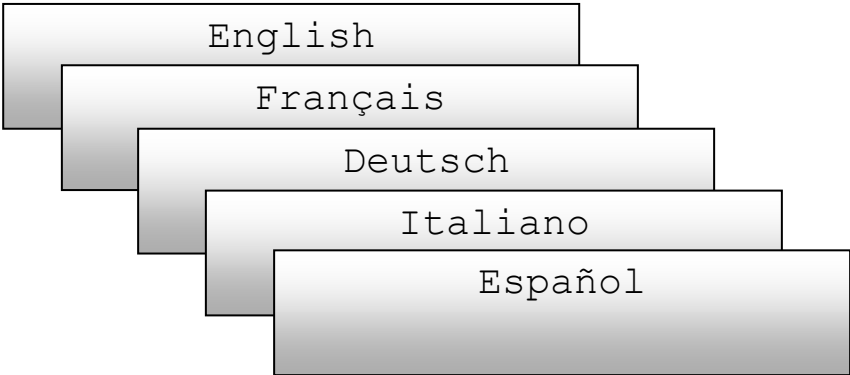

English

Français

Deutsch

Italiano

Español

## How the Envoy Works with Enlighten

The Envoy operates between the Enphase Microinverters and the Enphase Enlighten web-based monitoring software. The Envoy collects energy and performance data from the microinverters and forwards that data to Enlighten, via the Internet, for reporting.

Once you have registered the system and successfully installed the Envoy, Enlighten will set up an account for the site owner. You can then use Array Builder, a tool available to installers, to build the virtual array. Use the installation map you created during installation as a reference during this task. Or you can use the ArrayGun feature from the Enphase Installer Toolkit to easily build and configure a system. Refer to <http://enphase.com/products/arraygun/> for more information.



**NOTE:** To see the Array Builder demo, go to <http://enphase.com/support/videos/>.

If you do not already have an account, go to <http://www.enphase.com> for more information.


When you complete the registration and installation, Enphase sends account information to the site owner so that they can log in to the Enlighten website and view system performance.

Enlighten provides a wide range of information on system performance. You can even access Enlighten on your mobile device and view current performance information wherever you are.

## Using Enlighten to Check Envoy Status

To check status of Enphase equipment, do the following:

1. Log on to Enlighten to view the array. Click **Devices**.  
A list of equipment appears including the Envoy(s) and all of the microinverters that the Envoy has detected. The column on the far right lists the status of each microinverter.
2. To view status information for the Envoy, click the Envoy serial number.

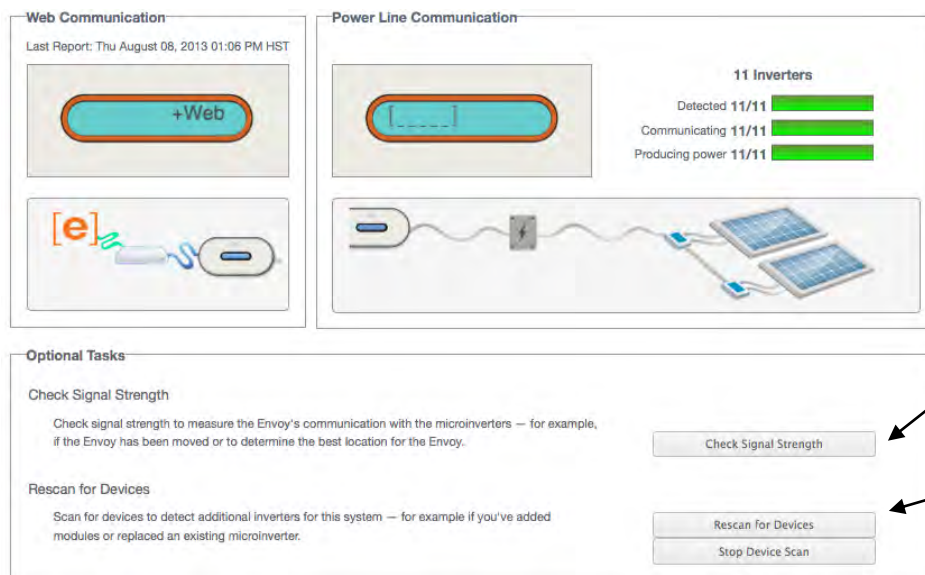

3. This screen indicates status for web communication, power line communication and microinverter count.
4. From here you can choose to **Check Signal Strength** or **Rescan for Devices** as needed. When checking signal strength, allow up to 15 minutes for a response.

## Troubleshooting


The following sections describe possible problems and solutions. For information on system status and event messages, see “**Event Messages**” on page 54. For more extensive information, refer to the *Installer’s Guide to Troubleshooting an Enphase Installation* at <http://www.enphase.com/support>.



**WARNING:** Do not attempt to repair the Enphase Envoy; it contains no user-serviceable parts. Tampering with or opening the Envoy will void the warranty. If the Envoy fails, contact Enphase customer support to obtain an RMA (return merchandise authorization) number and start the replacement process.

### Power Line Communication Troubleshooting

At power-up, the Envoy performs a “Communications check”. After a few minutes, it will display a number of bars in the LCD screen. This value, from zero to five, indicates the signal strength of the power line communication between the Envoy and the microinverters.

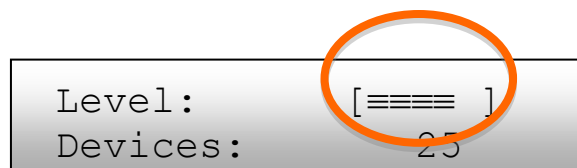

Any time the Envoy is restarted, it automatically performs a communications check. However, there may be times when you need to manually initiate a check. To do this:

- Press and hold the Envoy menu button. Release it when the LCD window displays **Enable Communication Check**. The check will run for 20 minutes.
- Note the number of bars shown in the Communications check.

A level of three to five bars is good. A number between one and two is not ideal. Zero bars means that you need to run another device scan, the Envoy needs to be relocated, or that one or more electrical appliances are causing interference. Troubleshoot power line communication issues as follows.

### Issue: The Microinverter Count is Lower than the Number of Installed Units

The microinverter count is an indication of the number of online microinverters producing power, reporting in to the Envoy, and not having any error conditions. If this number is lower than expected, it may indicate that the Envoy is not done scanning/discovering the entire array. Alternatively, it may indicate that the Envoy is having difficulty communicating over the power lines. It could also be a result of low light levels or that the PV module voltage is too low for the microinverter to power up. To troubleshoot the issue:

- Check the Inventory screen on the Envoy local interface to view any microinverters not reporting in to the Envoy or having any error conditions.
- Make sure that the Envoy is plugged directly into the wall and **not** into a power strip or surge protector.
- Relocate your Envoy as close to the electrical service panel (load center) as possible. This ensures that the Envoy receives the strongest possible signal from each microinverter.
- Unplug any other device that is sharing the outlet with the Envoy. Or, as an alternative, plug the Envoy into a circuit that supports fewer electronic appliances. Appliances sharing a receptacle with the Envoy may interfere with power line communication.
- If this problem occurs when light levels are low, try again during daylight hours.

## Issue: Envoy Displays Fewer than Three Bars

Follow the previous procedure for “Issue: The Microinverter Count is Lower than the Number of Installed Units”.

## Issue: Envoy Displays Zero Bars

The following conditions may exist.

**Has a device scan been run while the array was active?** The Envoy may have run a device scan on power-up when the array was not connected to the grid or when the array was not powered by sunlight.

- Run another scan during daylight hours.
- Check that the circuit breaker(s) for the PV array are in the “ON” position. For the Envoy to communicate with the microinverters, the PV circuit breakers must be in the “ON” position in the electrical load center.
- Verify that the PV modules are connected to the microinverters.

**Is the Envoy plugged into a good location?** The Envoy needs to be plugged into an AC outlet near the primary load center or the array's downstream subpanel.

- Make sure the Envoy is not plugged into an outlet strip or surge protector.
- Plug the Envoy into an outlet closer to the main load center or subpanel.
- Unplug other devices from the AC outlet used for the Envoy.
- As an alternative if signal strength is poor, power the Envoy from the solar production circuit (where local electrical code allows for monitoring equipment on the same circuit). This provides the best possible power line communications. The Envoy must be located indoors (a garage, attic, basement, or other cool, dry location) or in an outdoor weatherproof enclosure. Remember that the Envoy must also have Ethernet access via the broadband router, either directly with a CAT5 cable, Enphase wireless adapter, or via a power line communication bridge.

**Is the system energized?** PV modules power microinverters, PV modules provide power only during daylight hours, and microinverters communicate only when powered.

- Run another scan during daylight hours.
- Check that the circuit breaker(s) for the PV array are in the “ON” position. For the Envoy to communicate with the microinverters, the PV circuit breakers must be in the “ON” position in the electrical load center.
- Verify that the PV modules are connected to the microinverters.

**Is there a phase imbalance?**

- Ask the electrician to measure the conductors and neutral line to verify that the phases are balanced. If the phases are not balanced, electricians must recheck the wiring.

**The Envoy is plugged into a circuit on the primary load center, but the PV circuit breakers are on a downstream subpanel:** The primary load center is full and doesn't have additional capacity to add circuit breakers.

- Add a subpanel with a small subset of circuit breakers. In this case, it is best to add an additional 5-Amp circuit breaker and then run an outlet off that subpanel. Plug the Envoy into that AC outlet, so that it can be close to the PV circuit breaker.

## Network Basics and Troubleshooting

To the Local Area Network (LAN), the Envoy is just another host on the network, much like a personal computer. Enphase offers technical support at [support@enphaseenergy.com](mailto:support@enphaseenergy.com) for Envoy issues, but Enphase's Support responsibility does not extend to the premises network or LAN.

The Envoy must obtain a DHCP (Dynamic Host Configuration Protocol) IP address and have a route to the Internet. The Envoy will request this IP address from the broadband router during the power-up sequence. Two small green LEDs on the Ethernet port indicate Internet link and activity. One LED will be solid green, and the other will blink every few seconds.

### Issue: IP Address Problems

When the Envoy first boots up, it is configured to perform a DHCP broadcast, requesting an IP address from a DHCP source. This source can be a server/computer, but almost all consumer-grade broadband routers also provide DHCP services as well. This is the usual source of IP addresses for network hosts (computers, laptops, and the Envoy).

If the IP address displayed on the Envoy's LCD screen is 169.254.120.1, or if the IP address does not match the DHCP subnet on the internal network, then the Envoy was unsuccessful in obtaining a DHCP lease from the router.

- Check network connectivity to the router or other DHCP server. You may also wish to contact your Internet Service Provider or refer to your router documentation for help.
- Check that you are using a broadband router and not a switch or a hub. Many hubs and switches cannot provide a DHCP lease and may not allow the Envoy to connect to the web.
- Use the Envoy menu button to "Get New IP Address", and then allow 30 to 60 seconds for the new IP address to appear on the Envoy LCD screen.
- When using the Ethernet cable, two small LEDs on the Ethernet port indicate Internet link and activity. One LED will be solid green, and the other will blink green or yellow every few seconds. If the LEDs are not both on or blinking, try using a new Ethernet (CAT5) cable in place of the existing cable.
- Power down all units in the chain, applying power again in this order: 1) modem, 2) router, and 3) Envoy. Allow a few minutes for the IP address to be reassigned.

### Issue: LCD Screen Displays "-Web"

This means that the Envoy has no connection to the Enlighten website.

- Allow a few minutes longer. If the Envoy has recently received a valid IP address, it will likely display "+Web" momentarily.
- Check network connectivity to the router. You may also wish to contact your Internet Service Provider or refer to your router documentation for assistance.
- Unplug all units in the chain, applying power again in this order: 1) modem, 2) router, and 3) Envoy. Allow a few minutes for the IP address to be reassigned.
- Access the Administration screen on the Envoy local interface as directed on page 40, and click "Update Interface 0".
- Temporarily remove any power line communication bridges, and connect the Envoy directly to the broadband router.
- Run the "Network Connectivity Check" on the Ethernet Network Configuration administrative page on the Envoy.

### **Issue: LCD Screen Displays “Envoy Failure +Web or -Web”**

This message displays after the Envoy has tried unsuccessfully three times to initialize.

- Unplug the Envoy from the AC outlet and plug it in once again. Leave it in place for at least 15 minutes.
- If it continues to display “Envoy Failure” or if it never moves beyond the Initialization stage, contact Enphase Customer Support ([support@enphaseenergy.com](mailto:support@enphaseenergy.com)).

### **Issue: LCD Screen Displays "Scanning Inhibited"**

This message displays after an installer has used the Installer's Toolkit to provision the Envoy. Leave the Envoy in this condition for normal operation. If you need to re-enable scanning, contact Enphase Customer Support ([support@enphaseenergy.com](mailto:support@enphaseenergy.com)).

### **Issue: The Envoy has Good Signal Strength but is Too Far from the Router**

You may need to use power line communication bridges, an Enphase wireless adapter, or a wireless Ethernet bridge.

### **Issue: Wireless Adapter Wi-Fi Problems**

- If the wireless installation fails, try these solutions:
  - ✓ Verify that the Envoy is at version "R3.8" or later. If needed, upgrade the Envoy as directed.
  - ✓ Verify that the wireless adapter is fully inserted in the left Envoy USB port (looking at the Envoy from the front).
  - ✓ Power down all units in the chain, applying power again in this order: 1) modem, 2) router, and 3) Envoy.
- If the Envoy is installed in an enclosure and you are using the wireless adapter, that enclosure must be plastic or fiberglass to allow wireless communication. Metal enclosures impede wireless communication.
- Stucco and plaster wall construction may contain metal mesh, which can affect wireless range. If you cannot see your router or access point in the list on the Envoy, or cannot maintain a connection, relocate the Envoy to be closer to your router or access point.
- If you remove the wireless adapter, wait about 15 seconds before re-inserting it.

### **Issue: How Set Up Wi-Fi Without Wi-Fi WPS**

Envoy with wireless adapter supports several wireless security protocols in addition to Wi-Fi WPS. These include WEP Open System, WEP Shared Key, WPA-PSK, WPA2-PSK, WPA-EAP, and WPA2-EAP. If your router does not support Wi-Fi WPS or you do not wish to use Wi-Fi WPS, you can follow these steps to establish a wireless connection using one of the listed protocols.

- a. Verify that the wireless adapter is fully seated in the left USB port (looking at Envoy from the front).
- b. Plug the included Ethernet cable either to a laptop directly or to a PC on the same broadband router network.
- c. Access the Envoy Administration page.

d. Enter the default login credentials for the Administration menu are:

- Username: **admin**
- Password: **admin**

e. From the Administration menu, select **Wi-Fi Configuration**. This menu option is available only when the wireless adapter is installed in a USB port on the Envoy.

f. The interface displays a list of available networks.

g. Click a network to select it, enter the password, and click **Test Connection**.

- If you don't see your network listed, the router SSID broadcast may be blocked. If so, enter the SSID (name) and password.
- If your network is not blocked and not listed, click **Re-Scan** to refresh the list of networks.
- Status messages appear during the connection process, including "Connection Test" and "Confirmation".

h. Click **Join Network** when displayed.

- Once you have joined a network, it appears in bold in the list of available networks.

i. Disconnect the Ethernet cable.

Within two minutes, an updated IP address appears on the Envoy LCD screen. This IP address begins with a "**W**" to indicate that a wireless connection is established.

Within a minute, the Envoy LCD screen displays **+Web**, indicating a successful connection to Enphase.

## Issue: Internet Traffic is Slower After Installing a Bridge

A power line communication bridge can establish communication with a bridge in a neighboring home or business. This condition is called bridge crosstalk and it can affect your volume of Internet traffic. To see if an Internet traffic slowdown problem is caused by crosstalk, disconnect the bridge from the router. If after that, the Envoy stays online and the bridge continues to indicate connectivity, you are probably getting connectivity from another bridge. Reconnect the bridge to the router and disconnect the other bridge from the Envoy. If after that, your volume of Internet traffic increases, other devices are probably getting access to the Internet through your bridge. Reconnect the bridge. To prevent this problem, use the solution below according to the type of bridge you have.

### Asoka PL9650:

Change the password for your pair of bridges. Asoka has free Windows-only configuration software that allows password change for the PL9650 in the "Advanced" screen of their configuration utility. This operation requires an Ethernet cable and access to both ends of the bridge. The configuration software is available at <http://www.asokatech.com/downloads-page>.



### Asoka PL9660-Q1:

1. Plug in both PlugLinkAV adapters.
2. From either PlugLinkAV adapter, Press the push button for one second, (no more than two seconds) then release. The Power LED light will start blinking. NOTE: You will have two minutes to get to the second PlugLinkAV adapter.
3. From the second PlugLinkAV adapter, press the push button for one second, then release. The Power LED light begins blinking. Allow about 15 seconds for the pairing to occur. If the pairing is successful, the Power LED light goes from blinking to solid.



### ReadyNet EN200:

Use a pin and hold the Reset button down for two seconds on each unit you are trying to connect. The HomePlug AV Ethernet Adapter's light will flash, the units will reset and attempt to link using default factory settings.



### Tenda P200:

1. Press the Pair button on Adapter 1 for two to three seconds and then release it. The Power LED on the Adapter 1 will start blinking.
2. Within two minutes upon releasing adapter 1's Pair button, press the Pair button on Adapter 2 for two to three seconds and then release it. The Power LED on the Adapter 2 will start blinking.
3. Observe the two adapters' LED status. If the Power and PLC LEDs on the two adapters light up solid, it indicates that an encrypted private Power line network has been successfully created.



## DHCP versus Static IP Addressing

If the site owner prefers not to use DHCP, you can set up the Envoy to use a static IP address.

- Use the Envoy's web-interface to navigate to the ADMINISTRATION page. The Username is "admin", and password is "admin". Click the "Network Connectivity" menu item. This allows you to see if the Envoy is using DHCP or Static-IP, and it allows you to change this setting if needed.
- Click "Check Network Connectivity" to view the Envoy connections.



**WARNING:** Do not change the Envoy DHCP setting to use a static IP address unless you also reserve the same IP address on the broadband router. See the section on DHCP reservations in the router instructions. Failure to reserve the static IP address on the router will result in duplicate IP addresses and intermittent Internet connection problems with the Envoy.

## MAC Filtering

Check to see if MAC filtering is in use at the site. This has nothing to do with Apple Macintosh computers, but rather, refers to the MAC (Media Access Control) address that each individual network card possesses. The MAC Address is a 48-bit address, which uniquely identifies that piece of hardware. MAC filtering is a security mechanism by which routers allow administrators to specify which devices can use the router for access to the Internet. This prevents unauthorized/unknown personnel from using the router to get to the Internet.

An example of a MAC address would be: 00:17:F2:D6:B1:45

MAC addresses contain six pairs of characters, including any number 0-9 and letters A-F.

The MAC address of the Envoy will begin with: 00:D0:69:41:

If MAC filtering is in use at the site, identify the specific MAC address of the Envoy and add it to list of authorized devices on the router. To do this, browse to the home page of the Envoy's web-service using an ordinary web-browser. The home page contains that specific Envoy unit's MAC address. The MAC address is also located on a sticker that is located on the back of the Envoy.

## Firewall Settings

The Envoy initiates **outbound** connections to Internet servers. Such connections may be restricted by firewall rules set up on the site's broadband router. Broadband routers typically allow all outbound connections but restrict any/all inbound connections.

If outbound firewall rules are applied at the site, you must configure a static IP address for the Envoy and add new rules that allow outbound access as follows:

| Direction | Source             | Protocol | Port | Destination                     |
|-----------|--------------------|----------|------|---------------------------------|
| OUT       | <Envoy IP address> | TCP      | 443  | reports.enphaseenergy.com       |
| OUT       | <Envoy IP address> | TCP      | 443  | securereports.enphaseenergy.com |
| OUT       | <Envoy IP address> | TCP      | 443  | home.enphaseenergy.com          |
| OUT       | <Envoy IP address> | UDP      | 123  | us.pool.ntp.org                 |

The Envoy connects to these servers using their DNS names. If you add firewall rules for Envoy reporting, Enphase recommends using the DNS names rather than the underlying IP addresses. This is because the IP addresses are subject to change without notice.

## Replacing an Envoy

If problems remain after following the troubleshooting steps above, contact Enphase at [support@enphaseenergy.com](mailto:support@enphaseenergy.com). If Customer Support authorizes an Envoy replacement (RMA), perform the following steps.

1. Disconnect the Ethernet cable and power cord from the old Envoy.
2. When the replacement Envoy arrives, connect it to the Ethernet cable and power cord.
3. Verify that the new Envoy powers up. The Envoy LCD may display "**Upgrading... Do Not Unplug**" for up to 20 minutes. Wait for this to complete before proceeding.
4. Verify that the new Envoy indicates "**+Web**" within five minutes. If not, follow the network troubleshooting steps above.
5. If possible, log in to Enlighten and add the Envoy to the Activation for this system by clicking "**Add Another Envoy**" under the "**Envoy**" section.
6. Verify that the new Envoy start discovering microinverters within 20 minutes of starting up. If necessary, use the LCD menu (or the Enlighten Envoy page) to start a new device scan during daylight hours. (See Using the Envoy LCD Menu on page 20.)



**NOTE:** If the old Envoy has communicated to the microinverters on the same day that the new replacement Envoy is installed, the new Envoy will be unable to discover the microinverters. Contact Enphase at [support@enphaseenergy.com](mailto:support@enphaseenergy.com) for assistance in this situation.

7. After all microinverters have been discovered, stop the new device scan using the LCD menu. (See Using the Envoy LCD Menu on page 20.)
8. Assess the power line communications by running a Communication Check from the LCD menu (or from the Enlighten Envoy page) during daylight hours. (See Using the Envoy LCD Menu on page 20.) If fewer than three bars are shown, relocate the Envoy for better power line communications.
9. Contact Enphase Support at <http://www.enphase.com/support> to have the new Envoy added to your system and to retire the replaced Envoy.
10. Ship the old Envoy to Enphase using the supplied RMA shipping label.

## Envoy Local Interface

The Envoy relays data to Enlighten, and connection to the Enphase Enlighten web-based monitoring and analysis software requires an Internet connection. However, if there is no broadband router at the installation site, you can communicate directly with the Envoy using the Ethernet port and a personal computer with a web browser.

### Connecting to the Envoy through the Site's LAN

The following steps describe how to access the Envoy data through the site's LAN (local area network).

1. Open an Internet browser application on a computer connected to the same LAN as the Envoy.
2. In the browser address window, enter the IP address displayed in the LCD screen of the Envoy.

Once the browser has successfully connected with the Envoy, the home screen is displayed in the browser window.

### Directly Connecting to the Envoy without a Broadband Router

The following steps describe how to access the Envoy data through the local connection in the absence of a broadband router.

1. Connect one end of the Ethernet cable supplied with the Envoy to the Ethernet port on the Envoy.
2. Connect the other end of the Ethernet cable to the Ethernet port of the computer.
3. Open an Internet browser application on the computer.
4. In the browser address window, enter the IP address displayed in the LCD screen of the Envoy.



**NOTE:** If you fail to make a connection at this point, you can manually configure your subnet to 169.254.120.2 and subnet mask to 255.255.0.0. If this does not correct the problem, contact Enphase Customer Support ([support@enphaseenergy.com](mailto:support@enphaseenergy.com)).

Once the browser has successfully connected with the Envoy, the home screen is displayed in the browser window.

## Home Screen

The Home screen provides a system overview and shows the current status of the microinverters that have been identified by this Envoy. From this screen, you can access other screens in the interface.

The screenshot shows the Envoy Home Screen. At the top, the Enphase Energy logo is on the left, the Envoy Serial Number (121145084498) is in the center, and the 'enlighten' logo is on the right. Below the logo area are navigation links: Home, Events, Production, Inventory, and Administration. A Language dropdown menu is set to English. The main section is titled 'System Overview' and is divided into two columns: 'System Operation' and 'System Statistics'.

**System Operation**

- Connection to Microinverters: Connection to Web

**System Statistics**

|                                 |                               |
|---------------------------------|-------------------------------|
| Lifetime generation             | 6.61 kWh                      |
| Currently generating            | 1.20 kW                       |
| Last connection to website      | 0 minutes                     |
| Number of Microinverters        | 7                             |
| Number of Microinverters Online | 7                             |
| Current Software Version        | D3.6.19 (a49911)              |
| Software Build Date             | Wed May 08, 2013 06:47 PM PDT |
| Database Size                   | 1132 kB (0 % full)            |
| Current Timezone                | US/Pacific                    |

This screen includes information on web connection, microinverter count and various other data.



**NOTE:** In the System Statistics table, the “Number of Microinverters Online” may differ from the “Number of Microinverters” due to several factors including time lags, power line communication problems, and error conditions on the microinverters.

## Events Screen

To view events for your system, click **Events** from the Envoy Home screen to navigate to the Events screen. This screen includes information on events occurring on connected Enphase devices.

The screenshot shows the Envoy Events Screen. At the top, the Enphase Energy logo is on the left, the Envoy Serial Number (121145084498) is in the center, and the 'enlighten' logo is on the right. Below the logo area are navigation links: Home, Events, Production, Inventory, and Administration. A Language dropdown menu is set to English. The main section is titled 'Events'.

Show  entries

Search:

| Event id | Event                                    | HW Serial Num | Device | Date                          |
|----------|------------------------------------------|---------------|--------|-------------------------------|
| 886      | DC Power Too Low: Clear                  | 121145057873  | pcu    | Thu May 09, 2013 01:46 AM PDT |
| 885      | DC Power Too Low: Clear                  | 121145017383  | pcu    | Thu May 09, 2013 01:46 AM PDT |
| 878      | Alternate Voltage and Frequency Settings | 121116657572  | pcu2   | Thu May 09, 2013 01:46 AM PDT |
| 876      | Power generation off by command: Clear   | 121116657572  | pcu2   | Thu May 09, 2013 01:46 AM PDT |
| 875      | Software Reset                           | 121145084498  | envoy  | Thu May 09, 2013 01:49 AM PDT |
| 874      | Envoy Monitor Rebooted                   | 121145084498  | envoy  | Thu May 09, 2013 01:47 AM PDT |
| 873      | Software Reset                           | 121145084498  | envoy  | Thu May 09, 2013 01:45 AM PDT |
| 872      | Envoy Monitor Rebooted                   | 121145084498  | envoy  | Thu May 09, 2013 01:43 AM PDT |

## Production Screen

To view system energy harvest statistics for your system, click **Production** from the Envoy home screen to navigate to the Production screen.

Envoy Serial Number: 121145084498

enlighten

[Home](#)
[Events](#)
[Production](#)
[Inventory](#)
[Administration](#)

Language  
English

### System Energy Production

|                                                             |          |
|-------------------------------------------------------------|----------|
| System has been live since<br>Wed May 08, 2013 09:34 PM PDT |          |
| Currently                                                   | 1.20 kW  |
| Today                                                       | 5.49 kWh |
| Past Week                                                   | 6.85 kWh |
| Since Installation                                          | 6.91 kWh |

## Inventory Screen

To view a listing of the devices in your system, click **Inventory** from any screen to navigate to the Inventory screen.

Envoy Serial Number: 121145084498

enlighten

[Home](#)
[Events](#)
[Production](#)
[Inventory](#)
[Administration](#)

Language  
English

### System Inventory

New Device Scan Status

Scanning for new devices is **inactive**.

Device Scan Control

#### Microinverter

Show 25 entries

Search:

Search

Reset Table

| HW Part Num   | Installed                     | HW Serial Num | Device Status | Running Image - Updated                                 | Assembly Part Num      | Controller Part Num     | Last Report                   |
|---------------|-------------------------------|---------------|---------------|---------------------------------------------------------|------------------------|-------------------------|-------------------------------|
| 800-00299-r02 | Wed May 08, 2013 09:34 PM PDT | 121245017383  | OK            | 520-00044-r01-v01.15.04 - Tue May 07, 2013 09:36 PM PDT | 880-00046-r02          | 480-00010-r01-v03.05.10 | Thu May 09, 2013 10:01 AM PDT |
| 800-00005-r07 | Wed May 08, 2013 09:35 PM PDT | 030823001974  | OK            | 520-00001-r00-v00.04.20 - Tue May 07, 2013 09:55 PM PDT | fff-ffff-rft-vff.ff.ff | 560-00001-r01-v03.03.09 | Thu May 09, 2013 10:01 AM PDT |
| 800-00103-r05 | Wed May 08, 2013 09:38 PM PDT | 121145057873  | OK            | 520-00040-r01-v03.41.03 - Thu May 02, 2013 09:48 PM PDT | 880-00008-r23          | 480-00009-r01-v02.02.13 | Thu May 09, 2013 10:01 AM PDT |

## Administration Screen

The Administration screen of the Envoy local interface contains several configurable options. Click **Administration** to access this menu.




**NOTE:** For Envoy performance reasons, Enphase does not recommend giving the Envoy a publicly accessible IP address. However, if you must place the Envoy on a public-facing IP address, Enphase recommends that you change the Administration password to disallow unauthorized modification to your Envoy. **(This situation is rare, since consumer-grade routers normally provide the Envoy with an internal network IP address that is not publicly accessible.)**

For reference, your private/internal IP address space will be in the 192.168.x.x, 172.16(-31).x.x, 10.x.x.x or 169.254.x.x range. If you are unsure if your Envoy is on the public Internet, contact your network administrator or Internet Service Provider.

The default login credentials for the Administration menu are:

- Username: **admin**
- Password: **admin**

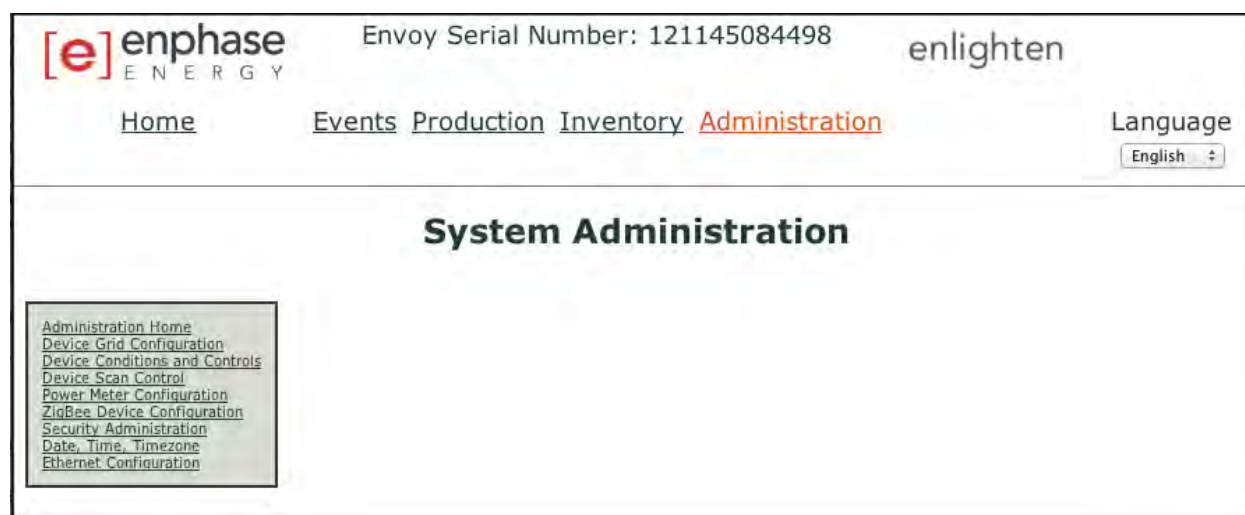

## Administration Screen Tasks

The following sections describe several Administration Screen tasks. Perform these tasks only when needed. Administration tasks include:

- Set or Change the Grid Profile
- Clear GFI Tripped Condition
- Clear DC Resistance-Low Condition
- Set Up Device Scan Control
- ZigBee Device Configuration
- Set Time Zone
- Other Administration Tasks

## Set or Change the Grid Profile

Many Enphase Microinverters have field-adjustable voltage and frequency trip points. Trip points are input voltage or frequency values that trigger the microinverters to shut down when the values are exceeded. If local regulations require adjustments to these trip points, or if the grid profile was not set up during registration (see page 11), the installer can set up the system to use an alternate Grid Profile (set of trip points).



**NOTE:** Only an authorized installer, following the requirements of the local electrical utility, is allowed to make Grid Profile adjustments.



**NOTE:** Grid profile changes are applied only after a microinverter is detected.

In some regions and in some situations, microinverter trip points may be adjusted to account for high grid voltage or for local conditions.


Grid profile management tasks include:

- Set the grid profile for your region
- View or verify current trip point settings
- Generate a report for confirmation of site settings to the utility or other authority

This feature is protected through use of a Change Token. Change tokens are issued on a per Envoy serial number basis. This procedure includes instructions on how to get a Change Token. If needed, contact [support@enphaseenergy.com](mailto:support@enphaseenergy.com) for your Grid Profile Change Token as directed on the screen. Change tokens expire after a day, so later grid profile changes may require a new token.

1. From the System Overview screen, click on **Inventory** and verify that all installed microinverters are detected.
2. Click **Administration** to access the Administration menu.  
The default log in credentials for the Administration menu are:
  - Username: **admin**
  - Password: **admin**

The System Administration screen appears.

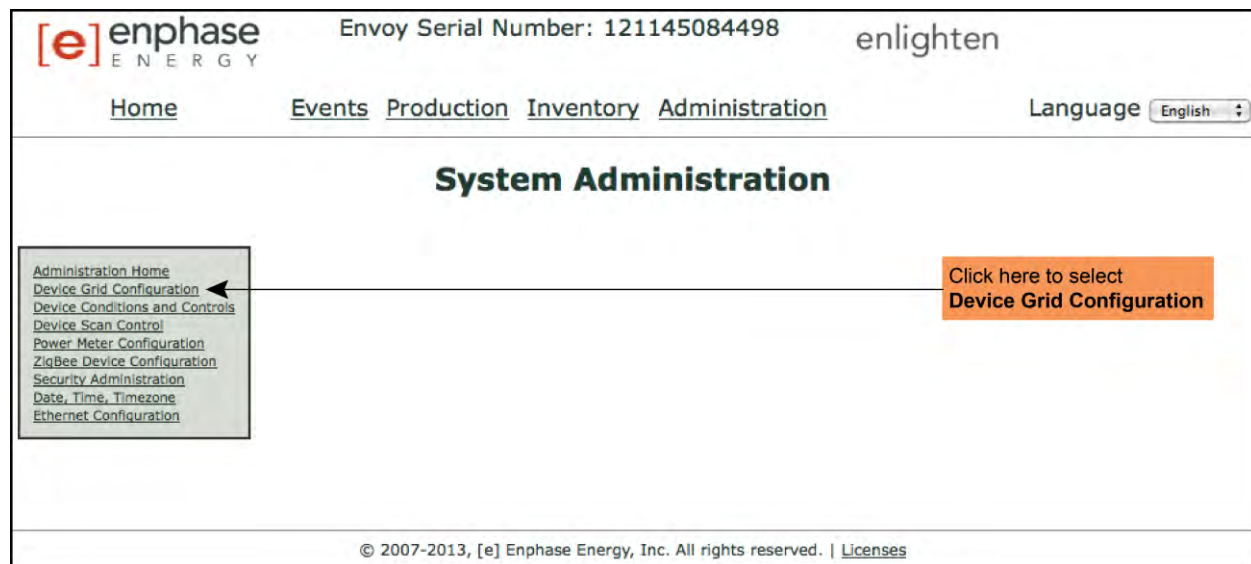

3. From the Administration menu, select **Device Grid Configuration**.

If no alternate device grid configuration has been applied, the following Device Grid Configuration screen appears, which indicates that the microinverters are using the factory-installed grid profile. This screen allows a licensed solar professional to select and apply the appropriate trip points for the solar installation.

The screenshot displays the Enphase Energy web interface for Device Grid Configuration. The top navigation bar includes links for Home, Events, Production, Inventory, and Administration. The main content area is titled "System Administration > Device Grid Configuration".

**Current Grid Configuration:** A message states, "The microinverters are using the factory-installed grid profile".

**Select Grid Profile:** A warning message says, "These settings should only be adjusted by a licensed solar professional". Below this, there are two dropdown menus: "Country regulatory specification: Please select" and "Grid profile: Please select". A "Manage Profiles" link is also present.

**Apply Grid Profile:** A message instructs the user to "Contact Enphase Energy customer support for a profile change token". It provides the "Serial number: 121215040490" and "Authorization number: 95526370". Below this, there is a field for "Installer's Profile change token:" and an "Apply Grid Profile" button.

**Annotations:**

- A yellow box labeled "Current Grid Configuration" points to the first message.
- A yellow box labeled "Select Grid Profile" points to the second message.
- A yellow box labeled "Apply Grid Profile" points to the third message.
- An orange box labeled "Click here to select a Country regulatory specification" points to the first dropdown menu.
- An orange box labeled "Click here to select a Grid profile" points to the second dropdown menu.
- An orange box labeled "Enter your token here" points to the "Installer's Profile change token:" field.
- An orange box labeled "Click here to Apply Grid Profile" points to the "Apply Grid Profile" button.

© 2007-2013, [e] Enphase Energy, Inc. All rights reserved. | [Licenses](#)

If an alternate device grid profile has been applied, the following screen appears.

**System Administration > Device Grid Configuration**

**Current Grid Configuration**

The microinverters are using the factory-installed grid profile

**Select Grid Profile**

These settings should only be adjusted by a licensed solar professional

Country regulatory specification:  [Manage Profiles](#)

Grid profile:

| Parameter                        | Value | Units |
|----------------------------------|-------|-------|
| <b>Voltage limits</b>            |       |       |
| Over voltage limit               | 144.0 | V     |
| Over voltage trip time           | 0.1   | s     |
| Over voltage limit (slow)        | 135.6 | V     |
| Over voltage trip time (slow)    | 0.2   | s     |
| Under voltage limit              | 60.0  | V     |
| Under voltage trip time          | 0.1   | s     |
| Under voltage limit (slow)       | 102.0 | V     |
| Under voltage trip time (slow)   | 1.33  | s     |
| <b>Frequency limits</b>          |       |       |
| Over frequency limit             | 60.5  | Hz    |
| Over frequency trip time         | 0.1   | s     |
| Under frequency limit            | 59.3  | Hz    |
| Under frequency trip time        | 0.1   | s     |
| Under frequency limit (slow)     | 59.3  | Hz    |
| Under frequency trip time (slow) | 0.1   | s     |
| <b>Reconnect</b>                 |       |       |
| Long term reconnect time         | 305.0 | s     |

**Apply Grid Profile**

Contact Enphase Energy customer support for a profile change token

Serial number: 121215040490

Authorization number: 95526370

Installer's Profile change token:

[Apply Grid Profile](#)

© 2007-2013, [e] Enphase Energy, Inc. All rights reserved. | [Licenses](#)

4. Select a **Country regulatory specification**.
5. Select a **Grid profile** appropriate for your region.
6. Make note of the Envoy serial number and the authorization number on the screen. You will need this information in the following steps.
7. Click the link to the Enlighten website. (If you do not already have an account, click **Enlighten Login** at the Enlighten website to register.) Note that this link will not appear if the Envoy shows “-Web” on the LCD screen.



**NOTE:** If the Envoy displays “-Web”, see “Network Basics and Troubleshooting” on page 31.

8. Once logged in at the Enlighten website, locate the Grid Profile Change Token widget. If you don't see this widget add it now:
  - Click **Add a widget**.
  - Select **Grid Profile Change Token**.

9. Enter the Envoy serial number.



A dialog box titled "Grid Profile Change Token" with a close button in the top right corner. It contains two text input fields: "Envoy Serial Number" and "Authorization Number". Below these fields is a button labeled "Get Token".

10. Enter the authorization number from the Envoy Interface.

11. Click **Get Token**.


Copy this token.



A dialog box titled "Grid Profile Change Token" with a close button in the top right corner. It displays the "Profile Change Token" as "5678956789". Below the token, it states "This token is valid for Envoy 123412341234 for one day." An arrow points from the text "Copy this token." to the token field.

12. Copy the token.

13. Paste or enter the token in the Grid Profile screen.

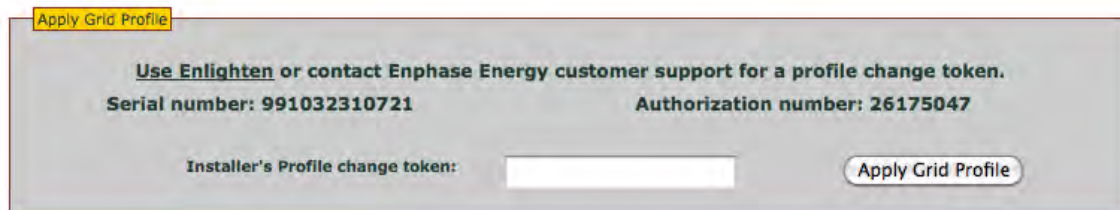

A screen titled "Grid Profile" with a yellow "Apply Grid Profile" button in the top left corner. The screen contains the following text: "Use Enlighten or contact Enphase Energy customer support for a profile change token." Below this, it shows "Serial number: 991032310721" and "Authorization number: 26175047". At the bottom, there is a label "Installer's Profile change token:" followed by a text input field and an "Apply Grid Profile" button.

14. Click **Apply Grid Profile**.

This propagates the settings to the microinverters.

The Apply Profile screen appears. This screen shows the Grid Profile Status for each microinverter. Initially the status for each unit is shown as un-set, soon followed by a status of "propagating." After approximately 10 minutes, the status is "set."

**System Administration > Device Grid Configuration > Apply Profile**

Regulatory specification: United States IEEE1547  
Profile: IEEE 1547 Mainland alternate

Last grid profile status refresh: Mon May 13, 2013 03:58:42 PM PDT  
This page will refresh every minute  
Profile change token accepted, grid profile update started  
[View Grid Profile Report](#)

Click here to View Grid Profile Report

| HW Part Num   | Installed                     | HW Serial Num | Grid Profile Status | Last Report                   |
|---------------|-------------------------------|---------------|---------------------|-------------------------------|
| 800-00299-r03 | Wed Apr 03, 2013 09:33 AM PDT | 121251008636  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Wed Apr 03, 2013 09:34 AM PDT | 121251008830  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Wed Apr 03, 2013 09:35 AM PDT | 121251008770  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Wed Apr 03, 2013 09:35 AM PDT | 121251008819  | un-set              | Mon May 13, 2013 03:55 PM PDT |
| 800-00299-r03 | Wed Apr 03, 2013 09:38 AM PDT | 121251008856  | un-set              | Mon May 13, 2013 03:55 PM PDT |
| 800-00299-r03 | Mon Apr 22, 2013 11:30 AM PDT | 121251008757  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Mon Apr 22, 2013 11:31 AM PDT | 121251008820  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Mon Apr 22, 2013 11:32 AM PDT | 121251008825  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Mon Apr 22, 2013 11:34 AM PDT | 121251008828  | un-set              | Mon May 13, 2013 03:56 PM PDT |
| 800-00299-r03 | Mon Apr 22, 2013 11:34 AM PDT | 121251008860  | un-set              | Mon May 13, 2013 03:56 PM PDT |

Showing 1 to 10 of 10 entries

© 2007-2013, [e] Enphase Energy, Inc. All rights reserved. | [Licenses](#)

This screen also allows you to generate a report to confirm that the microinverters have been set with an updated grid profile.

**15. Click View Device Profile Report.**

The Device Profile Report screen appears.

**16. Enter the site information in the window provided.**



Envoy Serial Number: 121145084498

enlighten

Language English

[Home](#)
[Events](#)
[Production](#)
[Inventory](#)
[Administration](#)

[Administration Home](#)  
[Device Grid Configuration](#)  
[Device Conditions and Controls](#)  
[Device Scan Control](#)  
[Power Meter Configuration](#)  
[ZigBee Device Configuration](#)  
[Security Administration](#)  
[Date, Time, Timezone](#)  
[Ethernet Configuration](#)

### System Administration > Device Grid Configuration > Device Profile Report

Device Profile Report

Envoy Serial Number: 121145084498

Current Grid Profile Status

Regulatory Specification: United States IEEE1547

Grid Profile: IEEE 1547 default

Report generation time: Tue May 14, 2013 09:26 AM PDT

Enter site information below:

| HW Part Num   | Grid Profile Status | Number of Microinverters |
|---------------|---------------------|--------------------------|
| 800-00035-r08 | set                 | 1                        |
| 800-00103-r05 | set                 | 1                        |
| 800-00299-r02 | set                 | 2                        |
| 800-00005-r07 | unsettable          | 1                        |
| 800-00021-r05 | unsettable          | 2                        |

Grid Profile: IEEE 1547 default

| Parameter                      | Value | Units |
|--------------------------------|-------|-------|
| <b>Voltage limits</b>          |       |       |
| Over voltage limit             | 144.0 | V     |
| Over voltage trip time         | 0.16  | s     |
| Over voltage limit (slow)      | 132.0 | V     |
| Over voltage trip time (slow)  | 0.2   | s     |
| Under voltage limit            | 60.0  | V     |
| Under voltage trip time        | 0.16  | s     |
| Under voltage limit (slow)     | 105.6 | V     |
| Under voltage trip time (slow) | 1.33  | s     |
| <b>Frequency limits</b>        |       |       |
| Over frequency limit           | 60.5  | Hz    |
| Over frequency trip time       | 0.16  | s     |
| Under frequency limit          | 59.3  | Hz    |
| Under frequency trip time      | 0.16  | s     |
| Under frequency limit (slow)   | 59.3  | Hz    |
| <b>Reconnect</b>               |       |       |
| Long term reconnect time       | 305.0 | s     |

17. Use your browser to send this report to your printer or to save it to a file. After printing or saving the file, you can send it to the local regulatory agency to verify the trip point settings. The report will look like the following example.

**Device Profile Report**
**Envoy Serial Number: 121145084498**
**Current Grid Profile Status**
**Regulatory Specification: United States IEEE1547**
**Grid Profile: IEEE 1547 default**
**Report generation time: Tue May 14, 2013 09:26 AM PDT**
**Enter site information below:**

Site Name  
123 Avenue  
Town, State, Country

| HW Part Num   | Grid Profile Status | Number of Microinverters |
|---------------|---------------------|--------------------------|
| 800-00035-r08 | set                 | 1                        |
| 800-00103-r05 | set                 | 1                        |
| 800-00299-r02 | set                 | 2                        |
| 800-00005-r07 | unsettable          | 1                        |
| 800-00021-r05 | unsettable          | 2                        |

**Grid Profile: IEEE 1547 default**

| Parameter                      | Value | Units |
|--------------------------------|-------|-------|
| <b>Voltage limits</b>          |       |       |
| Over voltage limit             | 144.0 | V     |
| Over voltage trip time         | 0.16  | s     |
| Over voltage limit (slow)      | 132.0 | V     |
| Over voltage trip time (slow)  | 0.2   | s     |
| Under voltage limit            | 80.0  | V     |
| Under voltage trip time        | 0.16  | s     |
| Under voltage limit (slow)     | 105.6 | V     |
| Under voltage trip time (slow) | 1.33  | s     |
| <b>Frequency limits</b>        |       |       |
| Over frequency limit           | 60.5  | Hz    |
| Over frequency trip time       | 0.16  | s     |
| Under frequency limit          | 59.3  | Hz    |
| Under frequency trip time      | 0.16  | s     |
| Under frequency limit (slow)   | 59.3  | Hz    |
| <b>Reconnect</b>               |       |       |
| Long term reconnect time       | 105.0 | s     |

## Clear GFI Tripped Condition

This condition occurs only with the M215, M190, D380, M210, M200, and M175 microinverters. A solid red status LED on the microinverter indicates a ground fault (GFDI) error. The LED will remain red and the fault will continue to be reported by the Envoy until the error has been cleared.

If a microinverter registers a GFI Tripped condition, you can attempt to clear this condition through the Envoy Interface. An Envoy is required to send the clear-gfi message to clear the condition. If the condition does not clear after you perform the following procedure, contact Enphase Energy customer support at [support@enphaseenergy.com](mailto:support@enphaseenergy.com).

To send the **clear-gfi** message to a microinverter:

1. From the Administration menu, choose **Device Conditions and Controls**.



**NOTE:** Do not click or select the box under the column labeled **Select**.

2. Click on the **serial number** of the unit showing the GFI condition.

The Control Flags screen appears.



**CAUTION:** The other control flags (reboot and cmd-alert) on this screen should be used only when recommended by Enphase. Their functions are:

- **reboot** - reboots the inverter
- **cmd-alert** - clears a condition flag for a command sent

3. In the **clear-gfi** box, select **set**.

Administration Home  
Device Grid Configuration  
Device Conditions and Controls  
Device Scan Control  
Power Meter Configuration  
ZigBee Device Configuration  
Security Administration  
Date, Time, Timezone  
Ethernet Configuration

Envoy Serial Number: 110938093522 enlighten

Home Events Production Inventory Administration Language English

### System Administration > Device Conditions and Controls

Control Flags for device serial # 110934070347 pcu

reboot cmd-alert

☐ set ☐ send

duration seconds

Send Command

Control Flags for device serial # 110934070347 pcu channel 1

clear-gfi

☐ set

Send Command

Select set

Click Send Command

© 2007-2013, [e] Enphase Energy, Inc. All rights reserved. | [Licenses](#)

4. Click **Send Command** to complete this task.

## Clear DC Resistance-Low Condition

This condition occurs only with the M250 microinverter. A solid red status LED on the microinverter indicates this condition. The LED will remain red and the fault will continue to be reported by the Envoy until the error has been cleared.

An insulation resistance (IR) sensor in the microinverter measures the resistance between the positive and negative PV inputs to ground. If either resistance drops below a threshold, the microinverter stops power production and raises this condition. This may indicate defective module insulation, defective wiring or connectors, moisture ingress, etc. Although the cause may be temporary, this microinverter condition persists until the sensor is manually reset.

If a microinverter registers a DC Resistance Low condition, you can attempt to clear this condition through the Envoy Interface. An Envoy is required to send the clear-dc-resistance-low message to clear the condition. If the condition does not clear after you perform the following procedure, contact Enphase Energy customer support at [support@enphaseenergy.com](mailto:support@enphaseenergy.com).

To send the clear-dc-resistance-low message to a microinverter:

1. From the Administration menu, choose **Device Conditions and Controls**.

Envoy Serial Number: 110938093522

[Home](#)
[Events](#)
[Production](#)
[Inventory](#)
[Administration](#)

Language English

Administration Home  
 Device Grid Configuration  
 Device Conditions and Controls  
 Device Scan Control  
 Power Meter Configuration  
 ZigBee Device Configuration  
 Security Administration  
 Date, Time, Timezone  
 Ethernet Configuration

Click here

### System Administration > Device Conditions and Controls

Active Devices

Show 10 entries
 Search: 
Search Reset Table

| Select                   | Serial Num   | Part Num      | Control Flags | Condition Flags               | Last Report                   |
|--------------------------|--------------|---------------|---------------|-------------------------------|-------------------------------|
| <input type="checkbox"/> | 121245017436 | 800-00299-r02 | None          | DC Resistance Low - Power Off | Mon May 13, 2013 03:40 PM PDT |

Showing 1 to 1 of 1 entries
 1

☐ Select all shown above
 Delete Selected



**NOTE:** Do not click or select the box under the column labeled **Select**.

- Click on the **serial number** of the unit showing the DC Resistance Low - Power Off condition.

The Control Flags screen appears.



**CAUTION:** The other control flags (reboot and cmd-alert) on this screen should be used only when recommended by Enphase. Their functions are:

- reboot** - reboots the inverter
- cmd-alert** - clears a condition flag for a command sent

- In the **clear-dc-resistance-low** box, select **set**.

enphase  
ENERGY

Envoy Serial Number: 110938093522

enlighten

Home Events Production Inventory Administration Language English

Administration Home  
Device Grid Configuration  
Device Conditions and Controls  
Device Scan Control  
Power Meter Configuration  
ZigBee Device Configuration  
Security Administration  
Date, Time, Timezone  
Ethernet Configuration

System Administration > Device Conditions and Controls

Control Flags for device serial # 121245017436 pcu

reboot cmd-alert  
☐ set ☐ send  
duration seconds  
Send Command

Control Flags for device serial # 121245017436 pcu channel 1

clear-dc-resistance-low  
☐ set  
Send Command

Select set

Click Send Command

© 2007-2013, [e] Enphase Energy, Inc. All rights reserved. | [Licenses](#)

4. Click **Send Command** to complete this task.

## Set Up Device Scan Control

The “controlled” device scan differs from other Envoy device scans in that it allows control over the scan period, scanning method, and the number of devices. When first installed, the Envoy initiates an eight-hour scan. This initial scan is the only scan needed for most systems.



**NOTE:** At sites with more than 100 microinverters, Enphase recommends using a controlled device scan and specifying the total number of devices to be discovered. This speeds up the discovery process. See the following procedure for details.

Run a controlled scan only to detect new or previously undetected microinverters.

To run a controlled scan:

1. From the Administration menu, choose **Device Scan Control**.  
The Device Scan Control screen appears.

The screenshot shows the 'System Administration > Device Scan Control' interface. The top header includes the Enphase logo, 'Envoy Serial Number: 121145084498', and the 'enlighten' logo. The navigation bar has links for Home, Events, Production, Inventory, and Administration. The sidebar on the left lists various configuration options. The main content area displays the 'Current Scan' status as 'inactive' and the 'New Scan' section with input fields for 'Scan Duration' (0:00:30), 'Priority Duration' (0:00:00), and 'Total Devices'. A 'Start Scan' button is located at the bottom right of the 'New Scan' section. A help box on the right provides details about the 'Scan Duration', 'Priority Duration', and 'Total Devices' options.

2. Enter a **Scan Duration** in days:hours:minutes (e.g., 0:00:60 to indicate zero days, zero hours, and 60 minutes). The scan duration depends on many factors, such as number of devices to be detected and quality of power line communication. You may want to start with a one-hour scan and increase the duration as needed.

3. Although optional, it is **best practice** to enter a value for **Total Devices**. Enter a value in this field. The Envoy stops scanning once it has detected the given number of devices.



**NOTE:** The Total Devices option can be used in conjunction with the Priority Duration option to help discover any last few microinverters.

4. Enter a **Priority Duration** (optional) in days:hours:minutes (e.g., 0:00:20 to indicate zero days, zero hours, and 20 minutes). If you enter a value in this field, the Envoy makes scanning the sole activity for the period specified.



**NOTE:** The Priority Duration option should only be used in limited situations, e.g., at large sites or sites experiencing problems discovering devices with the normal scan.

5. Click **Start Scan** to complete this task. The LCD screen displays the following, where “nnnn” represents the number of microinverters (devices) detected.

```
Priority Scan is
Active.   Devs: nnnn
```

## ZigBee Device Configuration

Use the ZigBee Device Configuration menu option only if you are also installing an Enphase compatible GE i210+ Revenue Grade Meter (RGM). For complete installation instructions, refer to the *Metering and Management Solution Installation and Operation Manual* at <http://www.enphase.com/support>.

## Set the Time Zone (optional)

Ordinarily, the Envoy obtains the time zone setting from Enlighten. If you do not have an Internet connection for the Envoy, you may want to set the local time zone. **This step is not necessary if the Envoy is reporting to Enlighten.** To set the time zone:

1. From the Administration menu, choose **Date, Time, Time Zone**.
2. Under **Time Zone Setting**, select a time zone from the **Select Time Zone** drop down menu.
3. Click **Update timezone setting** to complete this task.

The screenshot shows the Enphase Enlighten web interface. The header includes the Enphase logo, the Envoy Serial Number (121145084498), and the Enlighten logo. The navigation bar includes links for Home, Events, Production, Inventory, and Administration. The Language is set to English. The sidebar on the left lists various administration options, with 'Date, Time, Timezone' highlighted. The main content area is titled 'System Administration > Date, Time, Time Zone' and contains three sections:

- NTP Setting:** A checkbox labeled 'Use NTP to synchronize clock settings' is checked. An 'Update use NTP setting' button is present.
- No NTP Setting:** A section titled 'Set Date and Time (no NTP)' with input fields for Date (05/09/2013) and Time (11:09:53). An 'Update date/time settings' button is present.
- Time Zone Setting:** A section titled 'Time Zone: [Current US/Pacific]' with a 'Select Time Zone' dropdown menu and an 'Update timezone setting' button.

## Other Administration Tasks

- For information on optional Power Meter Configuration, see the [Enphase PMRS Technical Brief](#). This option does **not** apply to the Enphase compatible GE i210+ Revenue Grade Meter (RGM).
- Other Administration menu options not described in this manual are not required for normal system operation and should only be performed when recommended by Enphase.

## Event Messages

The following table lists messages that the Envoy local interface displays to indicate various conditions. These messages appear on the computer screen when your computer is connected to the Envoy local interface.

| Message Shown on Events and Inventory Screens             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AC Frequency Changing Too Fast                            | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> AC frequency is the frequency at which voltage varies on the utility grid. The microinverter reports that this value is changing more rapidly than allowed. Frequency Changing Too Fast events are usually transient and self-correcting by the utility.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| AC Frequency Out Of Range                                 | <p><b>Recommended Action:</b> This condition should correct itself. No action is required.</p> <p><b>Description:</b> The microinverter reports that the frequency coming from the utility is either too low or too high as specified by applicable regional standards.</p> <p>AC frequency is the frequency at which voltage varies on the utility grid. Frequency Out of Range events are usually transient and self-correcting by the utility.</p> <p>When the microinverter detects an out of frequency condition, it must remain offline until the utility has been within acceptable limits continuously for a short period of time (seconds to minutes, varies by region). If, during that time, the utility again exceeds or falls short of acceptable limits, the timer must restart and the microinverter may not begin producing power for an additional short period following the last out-of-bounds condition.</p> <p><b>If the condition persists:</b> Contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p> |
| ACMonitorError                                            | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> The microinverter is temporarily unable perform power conversion.</p> <p><b>If the condition repeats or persists:</b> Contact your installer to arrange for the installation of a replacement microinverter.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| AC Voltage Average High                                   | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> The microinverter reports that the average AC voltage coming from the utility over the past 10 minutes was too high for the configured grid profile.</p> <p><b>If the condition persists:</b> Contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| AC Voltage Out Of Range                                   | <p><b>Recommended Action:</b> This condition should correct itself. No action is required.</p> <p><b>Description:</b> The microinverter reports that the AC voltage coming from the utility is either too low or too high as specified by applicable regional standards.</p> <p>When a microinverter detects the voltage out of range condition, it does not produce power (per regulation) until the utility voltage returns within acceptable limits for several minutes (time varies by region). If during that time the utility voltage again goes beyond acceptable limits, the timer restarts.</p> <p><b>If the condition persists:</b> Contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                                                                                                                                                                                                                                                                                         |
| Applying grid profile xx from regulatory specification yy | <p><b>Description:</b> The Envoy has started a change to the grid profile for the microinverters. This process may take a few minutes. No action is required.</p> <p>xx = grid profile name</p> <p>yy = Regional specification name.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

| Message Shown on Events and Inventory Screens | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bad Flash Image                               | <p><b>Recommended Action:</b> Contact Enphase Energy customer support.</p> <p><b>Description:</b> The microinverter is not producing power due to a software problem.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Commanded Reset                               | <p><b>Recommended Action:</b> No action is required; it will automatically resume normal operation momentarily.</p> <p><b>Description:</b> The microinverter was reset, either following a successful software download or by user command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Control Request                               | <p><b>Recommended Action:</b> No action is required.</p> <p><b>Description:</b> The Envoy has received a control request made via the Envoy interface (Administration &gt; Device Conditions and Controls page) or via Enlighten. This uncommon condition will occur only during isolated troubleshooting procedures by Enphase personnel.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Critical Temperature                          | <p><b>Recommended Action:</b> This condition should correct itself. No action is required.</p> <p><b>Description:</b> This rare condition occurs if the microinverter reports an internal temperature that exceeds its rated range. It reacts by producing less power to reduce internal temperature. This reflects internal temperature coming from a sensor inside the microinverter, not the ambient temperature. Once the internal temperature of the microinverter is once again within normal limits, it will resume full power production and this event message will clear.</p> <p><b>If the condition persists:</b> Contact your installer or Enphase Energy customer support at <a href="mailto:support@enphase.com">support@enphase.com</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| DC Power Too Low                              | <p><b>Recommended Action:</b> This condition should correct itself. No action is required.</p> <p><b>Description:</b> This common condition occurs frequently at sunrise and sunset and indicates that sunlight levels are too low for effective production. Once sunlight levels increase, the microinverter resumes power production and this event message will clear.</p> <p><b>If the condition persists:</b> Contact your installer or Enphase Energy customer support at <a href="mailto:support@enphase.com">support@enphase.com</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| DC Resistance Low Power Off                   | <p><b>Recommended Action:</b> To clear this error using the Envoy interface, follow the directions on page 49. The insulation resistance (IR) sensor can be reset via the Enphase Envoy's Device Conditions and Controls page, or Enlighten's Current Issues page. Note that the condition will not clear after sensor reset if the failure is still present. If the condition persists, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p> <p><b>Description:</b> An IR sensor in the microinverter measures the resistance between the positive and negative PV inputs to ground. If either resistance drops below a threshold, the microinverter stops power production and raises this condition. This may indicate defective module insulation, defective wiring or connectors, moisture ingress, etc. Although the cause may be temporary, this microinverter condition persists until the sensor is manually reset.</p> <p><b>If the condition persists:</b> If the event persists after clearing the condition from the Envoy, contact your installer.</p> <p>For further assistance, contact Enphase Energy customer support at <a href="mailto:support@enphase.com">support@enphase.com</a>.</p> |

| Message Shown on Events and Inventory Screens | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DC Voltage Too High                           | <p><b>Recommended Action:</b> Ask your installer to check that the PV module and microinverter are compatible. It may be that the PV module generates a higher voltage than is recommended for the microinverter. The Enphase M250 and M215 are compatible with most 60-cell modules. For M250, the module must also use PV (photovoltaic) Wire. The M190 and D380 are compatible with many 60- and 72-cell modules.</p> <p><b>Description:</b> The microinverter reports that DC input voltage from the PV module is too high.</p> <p><b>If the condition persists:</b> If the PV module is compatible and the condition persists, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                  |
| DC Voltage Too Low                            | <p><b>Recommended Action:</b> This is usually a normal condition during hours of low light and at dawn and dusk.</p> <p><b>Description:</b> The microinverter reports that DC input voltage from the PV module is too low. If this condition does not clear during hours of full daylight, the microinverters may be heavily shaded or covered by snow.</p> <p><b>If the condition persists:</b> If this event occurs during full daylight or if the condition persists, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p> <p>If this event occurs and clears daily or often during hours of full daylight, check that the PV module and microinverter are compatible. The M215 and M250 are compatible with most 60-cell modules.</p> |
| Download to module begun                      | <p><b>Description:</b> The Envoy has started a software upgrade to the indicated microinverter.</p> <p><b>Recommended Action:</b> This process may take a few minutes. No action is required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Download to module ended                      | <p><b>Description:</b> The Envoy has successfully delivered a software upgrade to a microinverter.</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Download to module failed                     | <p><b>Description:</b> The Envoy was unable to successfully deliver a software upgrade to a microinverter.</p> <p><b>Recommended Action:</b> No action is required; the Envoy will repeat the attempt.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Envoy Failure                                 | <p><b>Recommended Action:</b> Unplug the Envoy from the AC outlet and plug it in once again. Leave it plugged in and in place for at least 15 minutes.</p> <p><b>Description:</b> This message displays after the Envoy has tried unsuccessfully three times to start up.</p> <p>This condition does not affect your system's ability to produce power. When the connection is restored, the Envoy will catch up with the transmission of any/all energy data it has stored.</p> <p><b>If the condition persists:</b> If the Envoy continues to display Gateway (or Envoy) Failure or if it never moves beyond the Initialization stage, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                             |
| Filesystem integrity audit failed             | <p><b>Description:</b> The Envoy file system integrity audit has failed.</p> <p><b>Recommended Action:</b> For assistance, contact Enphase Energy customer support.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

| Message Shown on Events and Inventory Screens | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| GFI Tripped                                   | <p><b>Recommended Action:</b> To clear this error using the Envoy interface, follow the directions on page <b>Error! Bookmark not defined.</b> After being reset, the condition will clear unless the conditions causing the event remain or if the failure is permanent.</p> <p><b>Description:</b> A microinverter has detected ground fault current greater than one amp on the DC side. A GFI sensor in the microinverter detects changes in the DC current and quickly opens (breaks) the circuit when there is a ground fault. These ground faults can be due to DC wires making contact with grounded racking, moisture, or overload.</p> <p><b>If the condition persists:</b> If the GFI event persists after clearing the condition from the Envoy, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a></p> <p>For further assistance, contact Enphase Energy customer support at <a href="mailto:support@enphase.com">support@enphase.com</a>.</p> |
| Grid Profile Incompatible                     | <p><b>Recommended Action:</b> The microinverters may need to have a software upgrade in order to be compatible with the selected grid profile. (The selected grid profile defines operating parameters that are compatible with your utility service.) If a microinverter software upgrade does not start automatically a few minutes after the after Envoy has discovered all microinverters, contact Enphase Energy customer support. Note that the Envoy requires a minimum of 3 bars to communicate effectively with the microinverters for the software upgrade.</p> <p><b>Description:</b> This message displays when the selected grid profile is incompatible with microinverter software or hardware. This condition can affect your system's ability to produce power.</p> <p><b>If the condition persists:</b> Contact Enphase Energy customer support (<a href="mailto:support@enphase.com">support@enphase.com</a>).</p>                                                                                                                |
| Grid Gone                                     | <p><b>Recommended Action:</b> In most cases no action is required. This occurs if there is a power outage in your area and the system has stopped production. Solar production will resume when the utility restores power to your area. Verify that the circuit breaker(s) for the PV array are ON at the load center. If all breaker(s) are on, the condition should clear itself.</p> <p><b>Description:</b> The microinverter has detected grid instability. In most cases, this points to a problem with the utility service (e.g., a power outage). In other cases, this may be a false positive and a microinverter may be incorrectly reporting grid instability. In this case a microinverter software upgrade may be needed to help resolve this issue.</p> <p><b>If the condition persists:</b> If Grid Gone events persist, contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                             |
| Grid Instability                              | <p><b>Description:</b> The microinverter is not producing power due to one or more of these conditions: AC Frequency Out Of Range, AC Voltage Out Of Range, or Grid Gone. Note that Grid Instability will remain for about five minutes after the underlying conditions clear. No power is produced during this time.</p> <p><b>Recommended Action:</b> No action is required unless the condition persists. If it persists, contact Enphase Energy customer support.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Grid Offset Hi                                | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> The average current to the grid is too high for the configured grid profile.</p> <p>When the microinverter is operating normally, no DC current is injected into the grid. If the DC current is too high, this may indicate an issue with the microinverter.</p> <p><b>If the condition persists:</b> Contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| Message Shown on Events and Inventory Screens                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid Offset Low                                                    | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> The average current to the grid is too low for the configured grid profile.</p> <p>When the microinverter is operating normally, no DC current is injected into the grid. If the DC current is too low (negative), this may indicate an issue with the microinverter.</p> <p><b>If the condition persists:</b> Contact your installer or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Grid profile application completed                                 | <p><b>Description:</b> The Envoy has completed a change to the grid profile for the microinverters. No action is required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| HardwareError                                                      | <p><b>Recommended Action:</b> Contact your installer to arrange for the installation of a replacement microinverter.</p> <p><b>Description:</b> A hardware failure has occurred that prevents power conversion.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| IUP Link Problem                                                   | <p><b>Recommended Action:</b> No action is required unless the condition persists.</p> <p><b>Description:</b> The IUP (Inter Microprocessor) is the internal communications link between the two sides of a D380 Microinverter. The message indicates that the Envoy detects a communications problem with the indicated D380(s).</p> <p><b>If the condition persists:</b> Contact Enphase Customer Support at <a href="mailto:support@enphaseenergy.com">support@enphaseenergy.com</a> for a software upgrade. If the D380 does not respond to the upgrade, it will need to be replaced.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Module added                                                       | <p><b>Description:</b> The Envoy has detected and is now associated to a new microinverter.</p> <p>No action is required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Microinverter failed to report                                     | <p><b>Recommended Action:</b> Ignore occasional instances of this event. Communication usually recovers on the next reporting cycle.</p> <p>If communications do not recover immediately, ensure that the Envoy is plugged in very near the load center. Also, if other devices are sharing the outlet with the Envoy, remove those devices from the outlet to improve signal strength.</p> <p>If the Enphase Envoy was recently relocated or if new devices or appliances were added to the circuit, it is possible that the new situation is not suitable for power line communication. The Envoy may need to be relocated to improve signal strength and reduce interfering noise on the power lines.</p> <p>To determine the quality of the Envoy's location for communication, run a Communications check by holding down the Envoy's menu button until the LCD display reads "Enable Communication Check" and then release the menu button. The Envoy will then broadcast a signal to the microinverters. Within 5 minutes, a "Communication Level" indication of 0 to 5 bars will display on the Envoy LCD display. The Envoy requires a minimum of 3 bars to communicate effectively with the microinverters.</p> <p><b>Description:</b> The Envoy reporting this condition is unable to communicate with the microinverters over the power lines.</p> <p><b>If the condition persists:</b> See "Power Line Communication Troubleshooting" on page 29, or contact your installer, or refer to the Troubleshooting Guide at <a href="http://www.enphase.com/support">http://www.enphase.com/support</a>.</p> |
| Microinverter grid configuration failed after 5 attempts, retrying | <p><b>Description:</b> The attempt to change the grid profile for the microinverters has failed after five tries. The Envoy will continue to attempt to change the grid profile.</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

| Message Shown on Events and Inventory Screens                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Microinverter grid configuration failure cleared after xx attempts | <p><b>Description:</b> A failed attempt to change the grid profile for the microinverters has cleared. The grid profile was successfully applied.<br/>xx = number of attempts</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                              |
| Module Sleeping                                                    | <p><b>Description:</b> The microinverter is off for the night.</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                                                                                                                                             |
| No Grid Profile                                                    | <p><b>Recommended Action:</b> Ask the installer to use the Envoy Gateway interface to select a grid profile for this system. For more information, see “Change or View the Grid Profile” on page 41</p> <p><b>Description:</b> The Envoy has not been set up with a grid profile for the microinverters.</p>                                                                                                                                                                            |
| Over Temperature                                                   | <p><b>Description:</b> The microinverter is too hot and is not producing power. This very rare condition usually clears without intervention.</p> <p><b>Recommended Action:</b> No action is required unless the condition persists. If it persists, contact Enphase Energy customer support.</p>                                                                                                                                                                                       |
| Power generation off by command                                    | <p><b>Description:</b> The microinverter is not producing power by user command. This uncommon condition will occur only during isolated troubleshooting procedures by Enphase personnel.</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                  |
| Power On Reset                                                     | <p><b>Description:</b> The microinverter has powered on after having both AC and DC disconnected.</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                                                                                                          |
| RGM Error                                                          | <p><b>Description:</b> The Enphase-compatible Revenue Grade Meter (RGM) has failed.</p> <p><b>Recommended Action:</b> Contact your installer to arrange for installation of a replacement meter.</p>                                                                                                                                                                                                                                                                                    |
| RGM Power Quality Warning                                          | <p><b>Description:</b> The Enphase-compatible Revenue Grade Meter (RGM) reports that the AC voltage coming from the <u>utility</u> is either too low or too high as specified by applicable regional standards. This is usually a temporary condition that will clear when power quality from the <u>local utility</u> returns to normal.</p> <p><b>Recommended Action:</b> No action is required unless the condition persists. If the condition persists, contact your installer.</p> |
| Shutdown                                                           | <p><b>Description:</b> The Envoy has been powered down (unplugged from AC power).</p> <p><b>Recommended Action:</b> Restore AC power to the Envoy.</p>                                                                                                                                                                                                                                                                                                                                  |
| Startup                                                            | <p><b>Description:</b> The Envoy has been powered back up (plugged back in to AC power).</p> <p><b>Recommended Action:</b> No action is required.</p>                                                                                                                                                                                                                                                                                                                                   |
| Transient Grid Profile                                             | <p><b>Recommended Action:</b> No action is required. This condition will clear once the grid profile test is complete.</p> <p><b>Description:</b> This system is currently in test mode.</p>                                                                                                                                                                                                                                                                                            |

## Technical Data

| Communications Interface                         |                                                                                                                                                                                                                 |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power line                                       | Enphase proprietary                                                                                                                                                                                             |
| Ethernet                                         | 10/100 auto-sensing, auto-negotiation                                                                                                                                                                           |
| USB (one or two ports, depending on Envoy model) | USB 2.0 interface, auto-sensing, auto-negotiation                                                                                                                                                               |
| Monitoring capacity                              | <ul style="list-style-type: none"> <li>Model number (SKU) ENV-120-01 can monitor up to 600 Enphase Microinverters.</li> <li>Model number (SKU) IEMU-03 can monitor up to 250 Enphase Microinverters.</li> </ul> |
| Power Requirements                               |                                                                                                                                                                                                                 |
| AC outlet                                        | 120 VAC, 60 Hz                                                                                                                                                                                                  |
| Power consumption                                | 2.5 watts typical, 7 watts maximum                                                                                                                                                                              |
| Mechanical Data                                  |                                                                                                                                                                                                                 |
| Dimensions (WxHxD)                               | 8.8" x 4.4" x 1.7"<br>(222.5 mm x 112mm x 43.2mm)                                                                                                                                                               |
| Weight                                           | 12 oz (340g)                                                                                                                                                                                                    |
| Ambient temperature range                        | -40°C to +65°C (-40° to 149°F)                                                                                                                                                                                  |
| Cooling                                          | Natural convection – no fans                                                                                                                                                                                    |
| Enclosure environmental rating                   | Indoor - NEMA 1                                                                                                                                                                                                 |
| Features                                         |                                                                                                                                                                                                                 |
| Standard warranty term                           | 2 years                                                                                                                                                                                                         |
| Compliance                                       | UL 60950-1, EN 60950-1, CSA22.2 No. 60950-1 and IEC 60950-1, FCC Part 15 Class B, CAN ICES-3(B)/NMB-3(B)                                                                                                        |
| Meter accuracy                                   | Envoy metering is qualified as +/- 5% or better.                                                                                                                                                                |
| CSI Eligibility                                  | The Envoy is included in the <a href="#">List of Eligible System Performance Meters</a> for the CSI program.                                                                                                    |
| API                                              | Production data                                                                                                                                                                                                 |